

TASCAM

Portacapture X8

便携式数字录音机

有关本设备所有功能的信息，请参阅参考手册。您可从TASCAM网站上下载参考手册的电子版。

Please see the Reference Manual for information about all the unit's functions. You can also download the Reference Manual from the TASCAM website.




https://tascam.jp/int/product/portacapture_x8/docs

使用说明书发行日期: 2021年12月

生产商：蒂雅克株式会社
地址：东京都多摩市落合一丁目47番地

1221.MA-3252B

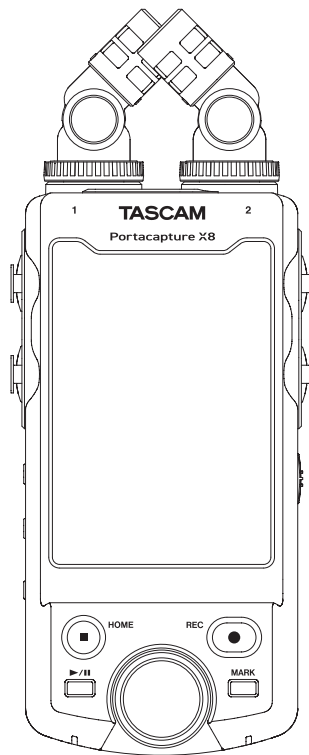

用戶手册

中文

OWNER'S MANUAL

ENGLISH

- TASCAM is a registered trademark of TEAC Corporation.
- The microSDXC Logo is a trademark of SD-3C, LLC.



- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.
- Supply of this product does not convey a license nor imply any right to distribute MPEG Layer-3 compliant content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.
- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Apple and Mac are trademarks of Apple Inc.
- App Store is a service mark of Apple Inc.
- IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.
- Android, Google Play and Google Play logo are trademarks of Google Inc.
- ASIO is a trademark and software of Steinberg Media Technologies GmbH.



- 本手册内所包含的其他公司名、设备名和标识为相应厂商的商标或注册商标。

蒂雅克株式会社 TEAC CORPORATION

<https://tascam.jp/jp/>

电话: +81-42-356-9143

1-47 Ochiai, Tama-shi, Tokyo 206-8530 Japan

蒂雅克商贸(深圳)有限公司

<https://tascam.cn/cn/>

电话: +86-755-88311561~2

中国广东省深圳市福田区深南大道南泰然九路西喜年中心A座817室,
邮编: 518040

用户手册

重要安全操作说明

警告：为避免发生火灾或触电，不要使本设备受到雨淋或受潮。

1. 仔细阅读此操作说明。
2. 妥善保管此操作说明。
3. 注意所有警告事项。
4. 遵守所有操作说明。
5. 不要在有水区域附近使用本设备。
6. 仅允许使用干布清洁设备。
7. 不要堵塞设备通风口。按照产品制造商操作说明中的相关规定进行安装。
8. 不要在散热器、热风调节器、烘箱或其他可产生热量的仪器（包括放大器）等热源附近安装设备。
9. 仅允许使用产品制造商指定的附件 / 配件。
10. 雷雨天气或长时间未使用时，应拔除设备电源插头。
11. 仅允许专业维修人员进行维修。设备出现任何形式的损坏时必须进行维修，例如：电源线或插头损坏、液体溅入或异物落入设备内、设备受到雨淋或受潮、操作不正常或发生掉落。
 - 由于来自于耳机的过大声压（音量）可能导致听力受损，因此，在产品使用过程中，佩戴耳机时，应遵守相关注意事项。
 - 如果您所购买的设备遇到此类问题，请致电 TEAC 维修人员。故障设备完成维修前，不要使用。

警告

- 为了防止可能的听力损伤，请勿在高音的模式下长时间进行聆听。



注意

- 不要将本设备放置在滴水或溅水区域。
- 不要在本设备上放置装有液体的物品，例如：花瓶。
- 不要在密闭空间内安装本设备，例如：书柜或类似物品。
- 如果本设备使用电池（包括电池组或内置式电池），不要将其放置在阳光下、火源或高温区域。

- 由于本设备使用可更换式锂电池，若更换为型号不匹配的电池，可能导致爆炸。仅允许更换为相同或同等类型的电池。

关于电池的注意事项

本产品使用电池。电池使用不当可导致泄漏、破裂或其他故障。使用电池时，请务必遵守下列注意事项。

- 不要对非充电电池充电。电池可能破裂或泄漏，引起火灾或伤害。
- 安装电池时，请注意极性指示（正 / 负（⊕ / ⊖）方向），并按照说明正确装入电池仓内。如极性装反，电池可能会破裂或泄漏，引起火灾、人身伤害或污染周围部件。
- 当保存或弃置电池时，用绝缘胶带或类似物件隔离电池端子，以防止其接触其他电池或金属物体。
- 丢弃废旧电池时，请按照电池上的处置说明和当地的处置法规进行处理。
- 请勿使用非指定的电池。不要混用新旧电池或不同类型的电池。电池可能破裂或泄漏，引起火灾、人身伤害或污染周围部件。
- 不要将电池与小的金属物品一同携带或存放。电池可能短路，引起泄漏、破裂或其他故障。
- 不要加热或拆卸电池。不要将电池投入火中或水中。电池可能破裂或泄漏，引起火灾、人身伤害或污染周围部件。
- 如果电池漏液，在插入新电池之前，清除电池仓内的所有液体。电池液进入眼中将会损坏视力。如果电池液进入眼睛，请一定不能揉眼睛，用清水彻底冲洗，然后立即咨询医生。如果电池液溅到身体上或衣服上，可能引起皮肤损伤或烧伤。如果发生此情况，用清水冲洗，然后立即就医。
- 安装和更换电池时，应关闭设备电源。
- 如果您长时间不使用设备，请取出电池。电池可能破裂或泄漏，引起火灾、人身伤害或污染周围部件。如果电池漏液，在插入新电池之前，清除电池仓内的所有液体。
- 不要拆卸电池。电池内的酸性物质可能损伤皮肤或衣物。

中国用户



“仅适用于海拔2000m以下地区安全使用”



“仅适用于非热带气候条件下安全使用”



“环境保护使用年限”

产品有毒有害物质或元素的名称及含量

机种: Portacapture X8		有毒有害物质或元素					
	品名	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
1	CHASSIS部分	○	○	○	○	○	○
2	PCB Assy部分	×	○	○	○	○	○
3	附属品部分	×	○	○	○	○	○
4	SEAL部分	○	○	○	○	○	○
5	包装部分	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含有量均在 GB/T26572 标准规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T26572标准规定的限量要求。

(针对现在代替技术困难的电子部品及合金中的铅)

放置和使用时的注意事项

- 本设备的工作温度范围为 0-40 °C。
- 严禁在下列位置进行设备安装。这样做会使音质变差和 / 或导致故障。
 - 存在明显振动的区域
 - 靠近门窗或其他可能暴露在直射阳光下的区域
 - 在加热器或其他高温区域
 - 低温区域
 - 非常潮湿或通风不良的区域
 - 多尘区域
 - 可接触到雨水或其他水源的区域

4 TASCAM Portacapture X8

- 如果将本设备放置在功率放大器或其他具有大型变压器的设备旁，可能导致设备发出交流声。如果发生此情况，请增大本设备和其他设备间的距离。
- 如果在电视或收音机附近使用本设备，可能导致电视屏幕颜色不均匀或收音机出现噪音。如果发生此情况，请将本设备远离这些装置。
- 如果在本设备附近使用移动电话或其他无线设备拨打电话或者发送或接收信号，本设备可能会产生噪音。如果发生此情况，请增大本设备和其他设备间的距离或者关闭其他设备。
- 不要把本设备放置在功率放大器或其他会产生热量的设备上。

注意冷凝

如果将本设备由低温区域移至高温区域，或在温度突变区域内使用本设备时，可能存在冷凝风险。为避免发生此情况，或如果发生此情况时，将本设备放置在新的室温下一或两个小时再开启。

清洁设备

使用软质干布擦拭设备。请勿使用化学清洁布、稀释剂、酒精或其他化学试剂擦拭。否则，可能损坏表面或引起变色。

无线电传输设备型式批准

CMIIT ID: 2021DJ6698

(本设备含认证的 RF 模块，证书编号 CMIIT ID:2021DJ6698)

Bluetooth®

本设备具有内置蓝牙音频接收器，可输入在支持蓝牙的计算机或便携式音频设备（蓝牙设备）上播放的声音。

注意

不保证本设备的蓝牙功能能够与所有蓝牙设备建立连接或操作。

传输安全性

根据蓝牙标准规格，本设备在蓝牙传输期间支持安全功能，但不保证此类传输的私密性。如果在蓝牙传输过程中发生信息泄露，蒂雅株式会社不承担任何责任。

简介

感谢您选购 TASCAM Portacapture X8。

使用本设备之前，请仔细阅读本用户手册，正确进行使用，并长年畅听。阅读完本手册后，请妥善保管本手册，以备将来参考。

您也可从 TASCAM 网站上下载本用户手册的电子版。

关于参考手册

本用户手册解释说明了本设备的主要功能。有关本设备所有功能的信息，请参阅参考手册。

您可从 TASCAM 网站上下载参考手册的电子版。

关于 TASCAM 客户支持服务中心

仅支持在该国家 / 地区购买的 TASCAM 产品及提供保修。

要在购买后获得支持，在 TEAC 全球网站的 TASCAM 代理列表页面内 (<https://teac-global.com/>)，搜索您购买本产品的地区的当地公司或代表，并联系该组织。

当查询时，需要您提供您购买所在地的店铺或网店的网址 (URL)。可能还需要保修卡和购买证明。



https://tascam.jp/int/product/portacapture_x8/docs

目录

重要安全操作说明.....	3
放置和使用时的注意事项.....	4
注意冷凝.....	4
清洁设备.....	4
无线电传输设备型式批准.....	4
Bluetooth®.....	4
传输安全性.....	4
简介.....	5
关于参考手册.....	5
关于TASCAM客户支持服务中心.....	5
随机部件.....	6
另购配件.....	6
部件名称.....	7
快速入门指南.....	8
连接随附的麦克风.....	8
插入microSD卡.....	8
供电.....	9
开启和关闭电源.....	9
设置语言、日期和时间.....	10
格式化（初始化）microSD卡.....	10
基本画面的操作.....	11
录制和播放文件.....	12
有用的功能.....	14
桌面启动器.....	14
通过智能手机控制本设备.....	15
连接相机.....	16
通过USB连接计算机和智能手机.....	16
录制操作流程.....	17
故障排除.....	19
规格/额定值.....	20

录音机规格.....	20
模拟音频输入额定值.....	20
模拟音频输出.....	20
控制输入/输出额定标准.....	20
音频性能.....	20
录制时间（以小时：分钟计）.....	21
其他.....	21

本手册仅提供有关产品的信息，仅用于举例说明，并不表示对侵犯第三方知识产权和与其相关权利提供任何担保。对于因使用这些产品而侵犯第三方知识产权或其发生的行为，TEAC 公司将不承担任何责任。

 
除个人享有和类似用途外，属于第三方的版权材料不得在未经版权法许可的情况下使用。请正确使用设备。TEAC 公司对本产品使用者的侵权行为不承担任何责任。

随机部件

本产品包含以下部件。

妥善保管包装材料，以备后续运输所需。


如果包装内的物品出现缺失或因运输导致损坏，请致电您购买本设备的商店。



主机 × 1




 随附麦克风 × 1
(左 / 右一对)



五号碱性电池 × 4

 用户手册 × 1
(本文档含保修卡)



AK-BT1
蓝牙适配器 × 1

另购配件

本产品不包含以下部件。

如需使用，请您自行购买。

- microSD 卡
用本设备进行录制和播放文件需使用 microSD 卡。
本设备可使用 10 级或更高级别，并与 SD、SDHC 或 SDXC 标准兼容的 microSD 卡。
用户可在 TASCAM 网站 (https://tascam.jp/int/product/portacapture_x8/docs) 上查询可用于本机的 microSD 卡。或者，请联系 TASCAM 客户支持服务。

- USB 数据线 (用于通讯或数据传输)
需准备 USB 数据线将本设备连接到计算机 (Windows/Mac) 或智能手机。
本设备配备 USB C 型端口。
准备适用于正在使用的计算机或智能手机的 USB 端口的 USB 数据线。
 - 不能使用专为充电设计的 USB 数据线。

使用闪电端口连接到 iOS 设备

需要正版的苹果闪电端口转 USB 相机适配器和市售的 A 型转 C 型数据线。

使用 USB C 型端口连接到计算机或智能手机

需使用市售的 C 型转 C 型数据线。

通过 USB micro-B 端口连接到智能手机

需使用市售的 micro-B 型转 C 型数据线。

通过 USB Type-A 端口连接到电脑


需使用市售的 A 型转 C 型数据线。

- PS-P520U 交流电源适配器
使用交流电源操作本设备时需要本适配器。

注释

使用交流电源适配器时，本设备不具有电池充电功能。

部件名称

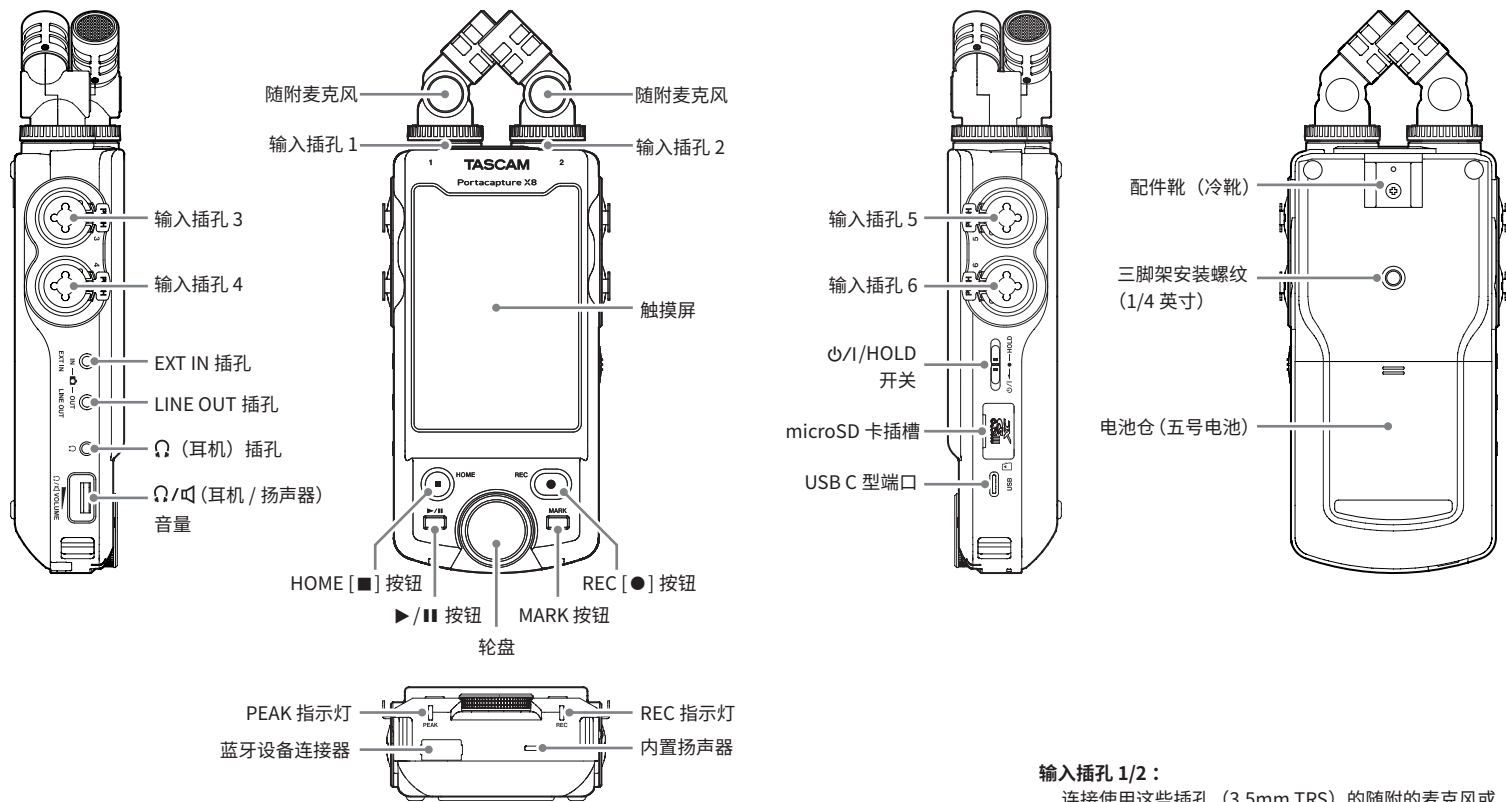

蓝牙设备连接器：

连接并使用 AK-BT1 蓝牙适配器。(详见第 15 页的“通过智能手机控制本设备”)

可通过两种方式连接随附的麦克风。

(详见第 8 页的“连接随附的麦克风”)

输入插孔 1/2：

连接使用这些插孔 (3.5mm TRS) 的随附的麦克风或兼容插入式电源的其他麦克风

输入插孔 3/4/5/6：

连接使用这些插孔 (XLR/TRS) 的其他麦克风或线路输出设备

快速入门指南

连接随附的麦克风

可通过两种方式连接随附的麦克风。


X-Y 连接

可以在清晰的立体声场和减小的相位差的情况下进行录制。


A-B 立体声连接

可以在宽广的左右立体声场的情况下进行录制。

1. 连接麦克风，使其金属圆盘面向与触摸屏相同的方向。

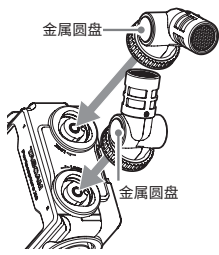


X-Y 连接

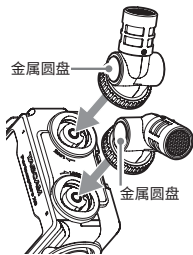


A-B 立体声连接

2. 旋转其锁紧环以将其固定到位。

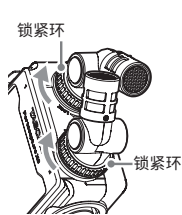

X-Y 连接

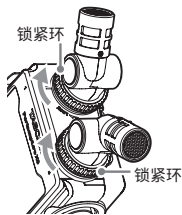

A-B 立体声连接

转动锁紧环直至其完全拧紧，即可使用随附的麦克风。

如果未完全拧紧其锁紧环，则无法识别随附的麦克风。

注释


- 反向执行这些步骤可断开麦克风的连接。
- 随附麦克风的角不可调节。
- 随附的麦克风不可旋转。

提示

输入插孔 1/2 支持插入式电源，可用于连接带有标准 3.5mm (1/8") TRS 插头 (Tip : HOT, Ring : COLD, Sleeve : GND) 的领夹式麦克风。

插入 microSD 卡

打开 microSD 插槽盖，然后插入 microSD 卡。

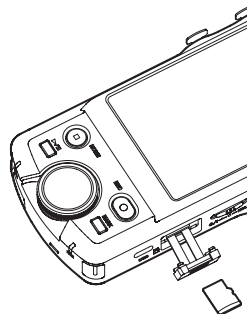

注释

microSD 卡为精密型存储介质。

为了避免损坏 microSD 卡，操作时请采取以下预防措施。


- 不要将其放置在高温或低温区域。
- 不要将其放置在极潮湿的区域。
- 不要淋湿。
- 不要在其上面放置任何物品或对其进行弯折。
- 不要碰撞。
- 在录制、播放、数据传输或其他数据存取过程中，不要取出或插入存储卡。
- 运送存储卡时，请将其放入盒子内。

供电

可通过两种方式为本设备供电：使用五号电池或使用 USB 端口通过外部电源供电。

使用五号电池

1. 取下电池仓盖，然后插入 4 节五号电池，其 ⊕ 和 ⊖ 标记方向如图所示。
2. 重新装上电池仓盖。

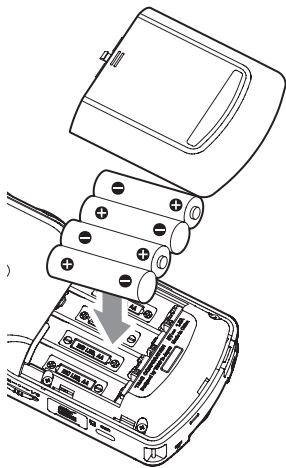

注释


- 本设备无法对镍氢电池充电。请使用市售的充电器。
- 随机附带的碱性电池用于确认设备的操作，可能无法长时间使用。

使用外部电源

将本设备的 USB 端口连接到外部电源。

下图是将 PS-P520U 交流电源适配器（另购）连接到本设备的示例。

TASCAM PS-P520U (另购)

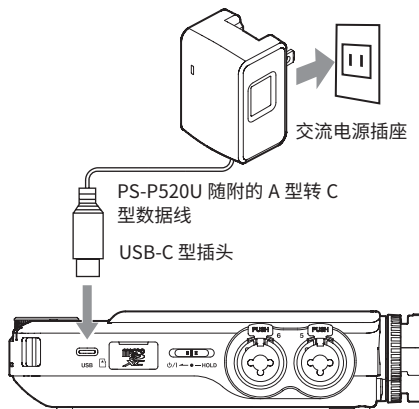

注意

我们强烈建议使用为本设备设计使用的交流电源适配器 (PS-P520U 另购)。使用其他外部电源时，请使用以下规格的电源。

- 供电电压：5V
- 供电电流：1.5A 或以上

使用上述规格以外的外部电源可能会导致故障、过热、火灾或其他问题。

如果发生任何异常，请停止使用并联系您购买本设备的零售商或 TEAC 服务中心进行维修。

注释

- 如果连接了电流小于 1.5A 的外部电源，则本设备将自动启动省电模式，进而限制某些功能。
- 使用出厂默认设置时，如果连接了外部电源，即使同时安装了电池，也将使用外部电源为设备供电。

可通过通用设置画面 > 电源 / 显示屏页面 > 电源选择项目更改电源设置。

- 有关详细信息，请参阅参考手册。

开启和关闭电源

开启电源

将 \mathcal{O}/I /HOLD 开关滑向 \mathcal{O}/I 直到激活显示屏。然后，释放开关。

启动本设备时，将启动触摸屏显示。



首次启动本设备时，会打开 LANGUAGE 画面。从第二次开始，会重新打开上一次关闭本设备时的画面，此画面为桌面启动器画面上选择的应用程序的 HOME 画面。


关闭电源

将 \mathcal{O}/I /HOLD 开关滑向 \mathcal{O}/I 直到显示屏关闭。然后，释放开关。

设置语言、日期和时间

选择语言

购买后首次启动本设备时，会打开 LANGUAGE 画面。

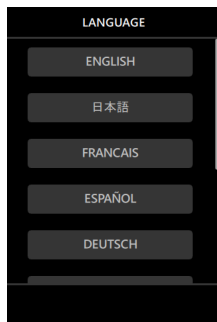

1. 垂直滑动屏幕，找到所需的语言。
选项

ENGLISH：使用英语（默认设置）
日本語：使用日语
FRANCAIS：使用法语
ESPAÑOL：使用西班牙语
DEUTSCH：使用德语
ITALIANO：使用意大利语
中文：使用中文
한글：使用韩语
русский язык：使用俄语

2. 点击所需的语言进行设置。

注释

可通过通用设置画面 > 系统 页面 > 语言 项目进行语言设置。有关详细信息，请参阅参考手册。

设置日期和时间

设置语言之后，只要重设日期和时间，日期时间设置画面就会打开以启用设置。




1. 可通过触摸并滑动数字设置日期和时间。
2. 点击 设置 按钮以确认设置。

注释

- 设置日期和时间后，如果加载了需要格式化的 microSD 卡，则会打开格式化确认画面。
- 也可以通过通用设置画面 > 系统 页面 > 日期时间设置项目对日期和时间进行更改。（详见第 19 页的“设备未开启”）

格式化（初始化）microSD 卡

如果加载了未格式化的卡，将显示以下消息。
点击快速格式化或擦除格式化开始格式化。

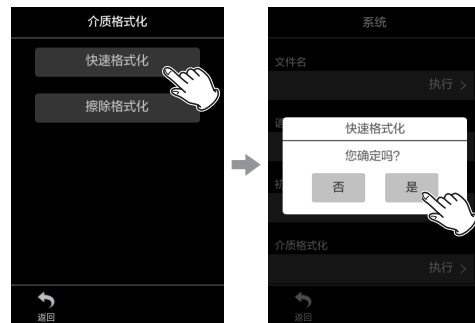

- 首次将 microSD 卡在本设备上使用时，我们建议通过擦除格式化对 microSD 卡进行格式化。
- 格式化成功完成后，会打开桌面启动器（应用程序选择）画面。

注意

格式化将删除 microSD 卡上的所有数据。
在对卡进行格式化之前，请将其备份到计算机。

注释

- 也可以通过通用设置画面 > 系统 页面 > 介质格式化项目执行格式化。（详见第 19 页的“设备未开启”）
- 可通过擦除格式化选项改善因重复使用而导致的写入性能下降。如果“写入错误 继续录制”或“卡速慢 检查 BOF 标记”在录制过程中出现，请使用擦除格式化选项对卡进行格式化。
- 当格式化时，擦除格式化会检查内存的错误，因此会比快速格式化需要更多的时间。


基本画面的操作

可通过在本设备的触摸屏上点击和滑动来设置和调整功能。首次启动本设备，设置语言、日期和时间后，会打开桌面启动器画面。

桌面启动器画面可用于启动各种录制应用程序和设置画面。

启动录制应用程序


1. 如下图所示，在屏幕中间滑动，选择要启动的应用程序。

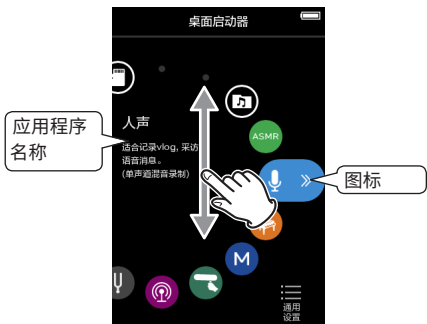

2. 点击其图标，启动此应用程序。




录制应用程序 HOME 画面将打开。

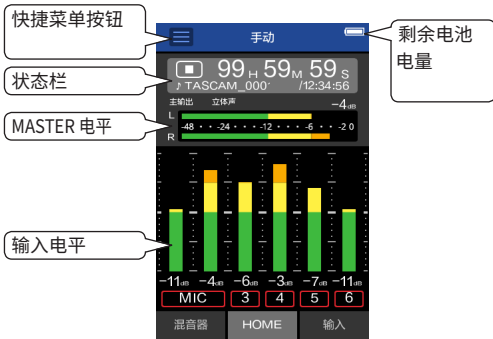

手动 录制应用程序示例

切换画面

点击显示屏底部的画面名称，切换至此画面。

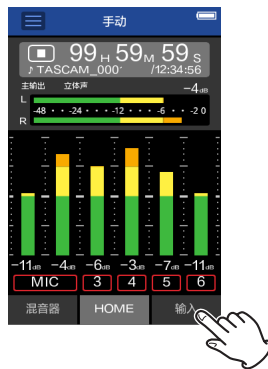


返回到桌面启动器 画面

1. 点击画面顶部的快捷菜单按钮。



快捷菜单将在画面底部打开。

2. 点击快捷菜单中的桌面启动器图标。

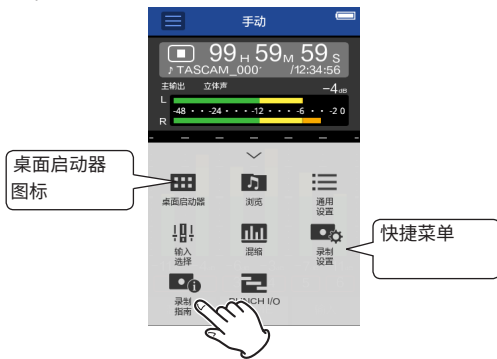

桌面启动器画面将重新打开。

录制和播放文件

录制


要进行录制，请打开桌面启动器画面上显示的适合录制类型的录制应用程序（详见第 14 页的“录制应用程序”）。

启动录制应用程序后，必须设置每个音轨的输入电平及其混音，以便以合适的电平进行录制。

本设备具备录制指南功能，旨在防止用户误跳过重要步骤或操作步骤顺序混乱。此功能仅适用于手动应用程序。（出厂时，录制指南功能默认为开启。）

启动手动应用程序后，将显示操作步骤。请按照其指示进行调整。

启用录制指南功能时，设置画面将按以下顺序打开，以便按正确的顺序进行设置。

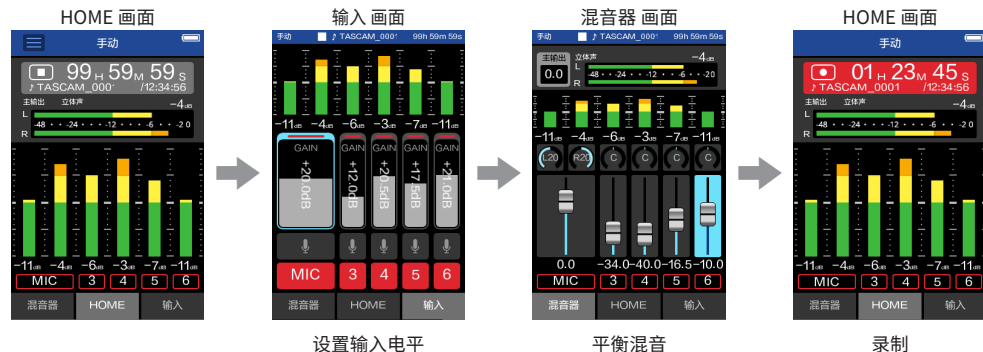


注释

- 默认状态下（录制指南功能已激活），在按照指南步骤进入混音器画面之前，无法开始录制。
- 如果不需要录制指南功能，请打开手动应用程序 HOME 画面，按快捷菜单，然后将“录制指南”设置为“关”。这样除混音器画面之外，还可以从其他画面开始录制。
- 请参阅第 17 页的“录制操作流程”，了解打开或关闭录制指南功能时录制操作的不同。

本手册中，解释说明了手动应用程序的录制步骤（已开启录制指南功能），此为使用本设备的基本方法。有关使用其他应用程序的录制步骤的解释说明，请参阅参考手册。

步骤 1：启动录制应用程序

1. 启动桌面启动器画面的手动应用程序。

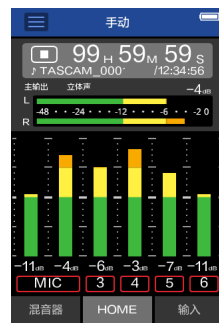

录制应用程序 HOME 画面将打开。

步骤 2：设置输入电平


1. 按下设备上的 REC [●] 按钮。



REC 指示灯将闪烁。


2. 点击屏幕右下方的输入以打开输入画面。

3. 点击 MIC 或数字 3 至 6，开启 / 关闭录音轨。

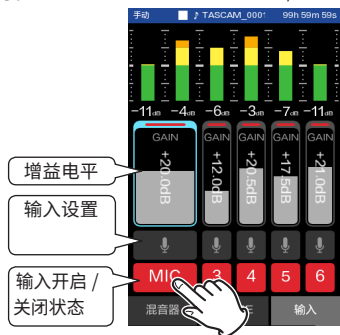

将录制显示红色背景的音轨。

4. 滑动音轨 GAIN 推子，调整其输入电平。

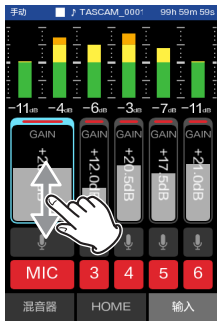


观察电平表的同时，调整 GAIN 推子，直至电平表达达到最高约 -12 dB。

注释


如果输入电平超过 -2 dB，则本设备上的 PEAK 指示灯将点亮。

步骤 3：设置混音器

1. 点击画面左下方的混音器，打开混音器画面。

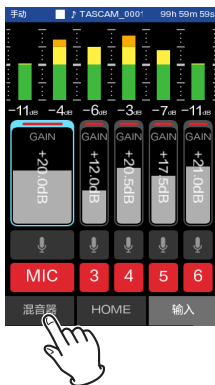


2. 滑动每个音轨的推子，调整发送到 MASTER 的电平的平衡。

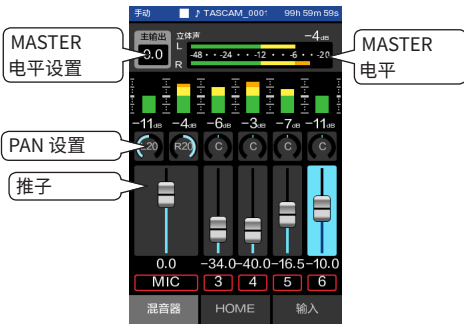


- 如果输入电平太低，录制的声音会太小，但如果输入电平太高，录制的声音会失真（或破音）。

步骤 4：开始录制

 1. 按下 REC [●] 按钮可开始录制。



录制开始时，REC 指示灯将点亮。

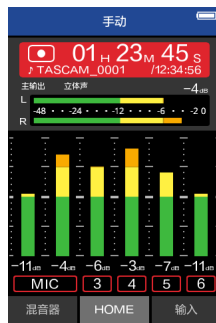

2. 按下 HOME [■] 按钮可停止录制。



录制停止时，REC 指示灯将熄灭。

开始播放

按下 ►/⏸ 按钮可开始播放。

注释

通过内置扬声器聆听播放声音时，请将通用设置 画面 > I/O 设置 页面 > 扬声器 项目设置为开。出厂时，此设置为关。

暂停播放

播放期间，按下 ►/⏸ 或 HOME [■] 按钮可暂停播放。

再次按下 ►/⏸ 按钮可恢复播放。

停止播放

暂停或播放期间按下 HOME [■] 按钮可返回文件的起始点。

注释

有关其他播放功能的说明，请参阅参考手册。

使用耳机聆听

将耳机连接到 Ω (耳机) 插孔。

注意

连接耳机前，请将 Ω/🔊 (耳机 / 扬声器) 的音量控制降至最低。否则，可能突然产生较大噪声，损害听力或导致故障。

调整音量

使用 Ω/🔊 (耳机 / 扬声器) 音量控制来调整内置扬声器和耳机输出的音量。

有用的功能

以下是一些功能的示例。有关使用和其他功能的详细信息，请参阅参考手册。

桌面启动器

桌面启动器 可用于启动各种录制应用程序和打开设置画面。



录制应用程序

以下应用程序适用于典型的录制情况。

手动 M	此为本设备的一个基本应用程序。可实现至多六个声道的多音轨录制。
人声 🎤	此录制应用程序非常适合录制采访和会议。
播客 📻	此应用程序非常适合至多四人播客的录制。
音乐 🎹	此录制应用程序非常适合轻松录制乐器和声乐表演。

室外 🏠	此录制应用程序非常适合进行户外录制。
ASMR 🎧	画面效果会根据此应用程序中的输入声音而改变。

注释

应用程序的设计和功能以及其他功能会随着固件更新而变更。

通用设置 画面

点击项目可对本设备进行详细设置。



有关所有设置的信息，请参阅参考手册。

通过智能手机控制本设备

当 AK-BT1 蓝牙适配器连接到本设备的蓝牙设备连接器时，可使用控制器应用程序通过 iOS/ 安卓设备控制本设备。

步骤 1：安装专用的智能手机应用程序



1. 将设备连接到互联网。
2. iOS 设备的 App Store 上搜索“Portacapture Control”。然后，下载并进行安装。
Android OS 用户，请由此获取 APK 文件
https://tascam.cn/cn/product/portacapture_x8/download



- 请注意，您将承担与互联网连接相关的传输费用。

步骤 2：使用蓝牙与本设备连接

1. 从本设备的蓝牙连接设备端口取下盖子，然后将 AK-BT1 装入此端口。

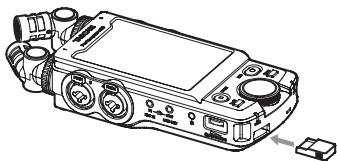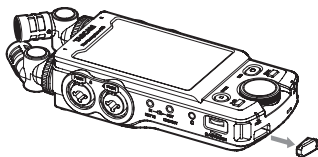


- 朝屏幕方向插入连接器。

2. 在智能手机或平板电脑上启用蓝牙连接。

注释

有关步骤，请参阅蓝牙设备的操作手册。

3. 使用智能手机或平板电脑启动 Portacapture Control。

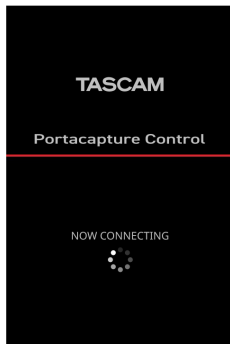

蓝牙设备画面

4. 如未打开设备，将其打开。

5. 在本设备上，打开通用设置 画面 > 其他设置 页面 > BLUETOOTH 项目。




连接完成后，智能手机或平板电脑的显示屏将自动切换到操作画面。

AK-BT1 访问指示灯（蓝色）显示连接状态。

指示灯	状态
熄灭	未配对
闪烁	等待配对
点亮	已配对

步骤 3：使用专用的智能手机应用程序

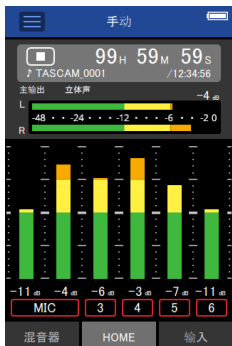

画面底部的四个按钮对应设备上的实物按钮，点击按钮将执行与实物按钮相同的功能。

MARK：对应设备上的 MARK 按钮

- ：对应停止按钮
- ▶：对应播放按钮
- ：对应 REC 按钮
- 其他操作与在本设备上使用触摸屏相同。

注释

在配对的设备上无法监听录制。请使用本设备上的耳机插孔。


连接相机

连接至数字单反相机时，可使用以下功能。

- 输出标记音调 and 设置电平
- 降低 LINE OUT 插孔的输出电平以适用相机

提示

标记音调是同时输入视频文件的音频和本设备录制的文件中的信号。在编辑视频文件时，可用于同步音频。

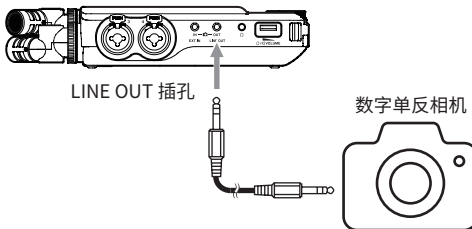

通过 USB 连接计算机和智能手机



通过 USB 连接到计算机 (Windows/Mac) 或智能手机时，可使用以下功能。

- 将本设备用作 USB 麦克风
- 在本设备的 microSD 卡上进行录制的同时录制到计算机 (录制备份)
- 通过计算机监听声音
- 通过本设备的麦克风添加声音至正在计算机上播放的声音，并在互联网上实时播放 (回送)
- 用作 microSD 卡读卡器 (仅在连接到计算机时)

注释


需准备 USB 数据线 (另购) 将本设备连接到计算机或智能手机。(详见第 6 页的“另购配件”)


USB C 型端口

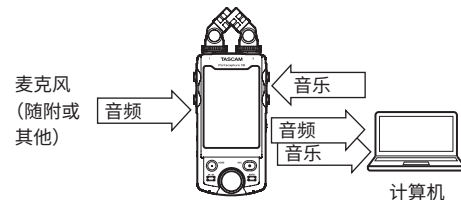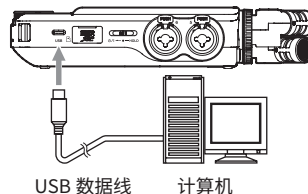

录制操作流程

本设备具备录制指南¹和 REC 暂停²功能。根据其开启 / 关闭设置，按下按钮将具备以下效果。

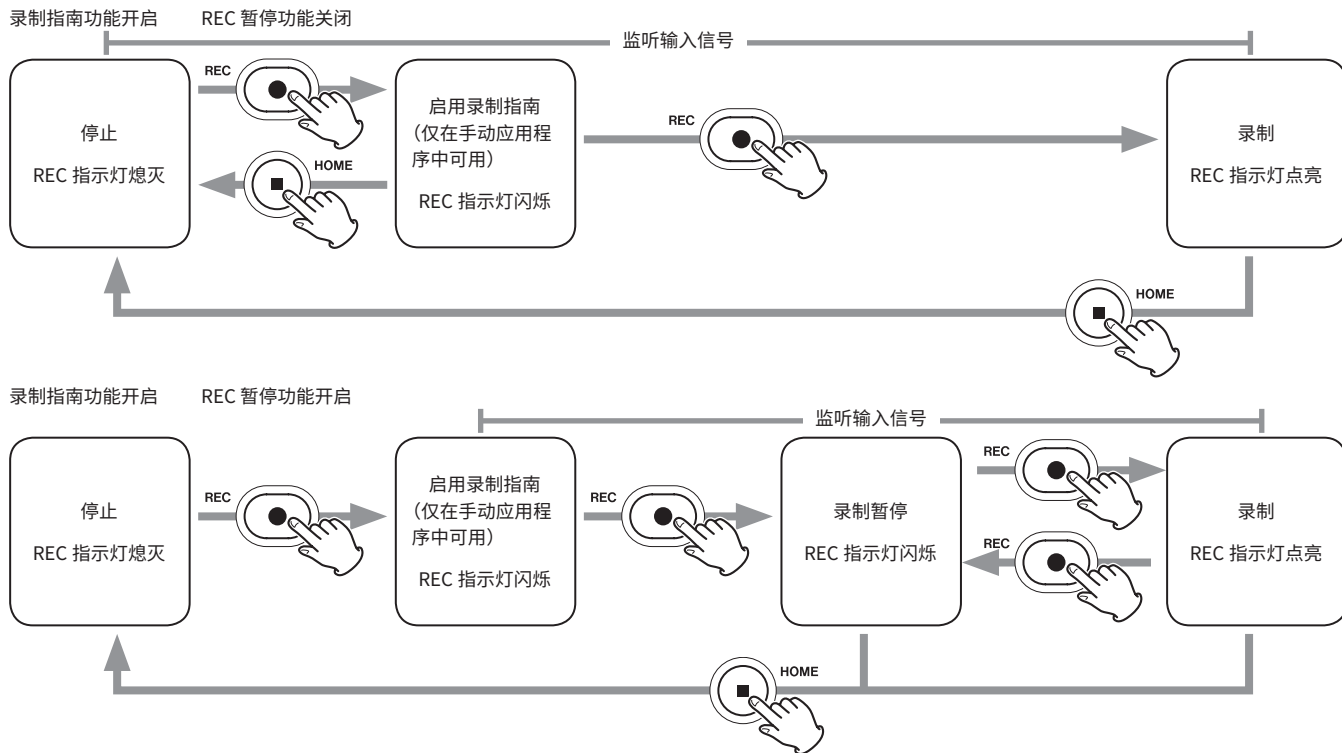

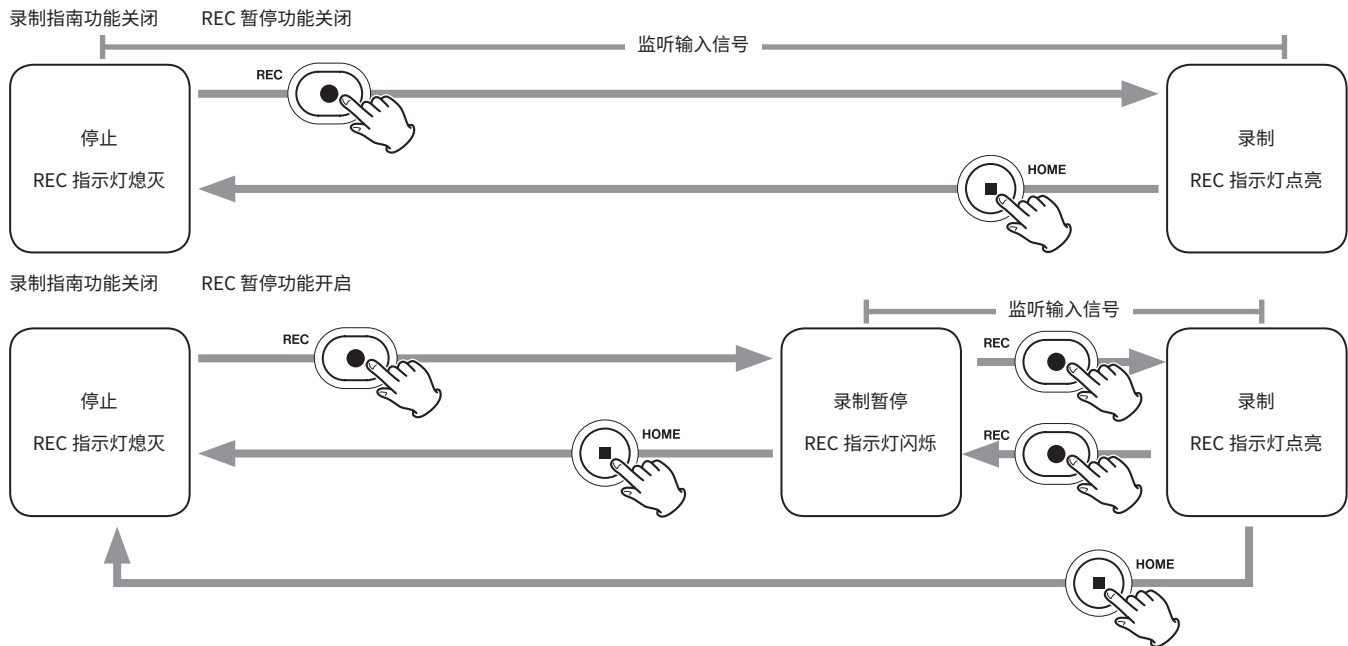

¹ 录制指南功能仅适用于手动应用程序。使用手动应用程序之外的应用程序时，无论录制指南功能设置为开启 / 关闭，均会禁用此功能。

² 本设备具备 REC 暂停功能，当按下 REC [●] 按钮时，将开始监听输入信号。此功能适用于所有录制应用程序。

录制暂停时，可使用 REC 暂停功能减少功耗。此外，可反复开始和暂停录制，而无需停止录制将其保存为单个文件。

出厂时，REC 暂停功能设置为关闭。

REC 暂停功能关闭时，当录制应用程序为开启状态时，将始终监听输入信号。

REC 暂停功能开启时，仅在录制指南功能为开启状态，暂停录制或正在进行录制时，才可监听输入信号。

可以在通用设置 画面 > 录制设置 页面设置 REC 暂停功能。

故障排除

如果本设备存在操作故障，在寻求维修前请查看如下内容。如果这些措施无法解决问题，请联系您购买本设备的商店或 TASCAM 客户支持服务部门。

设备未开启

- 确认 ϕ /I/HOLD 开关未设置为 HOLD。
- 确认电池安装正确。
- 确认 TASCAM PS-P520U 交流电源适配器（另购）电源插头和 USB 连接器已牢固连接。本设备可能无法通过 USB 集线器正常运行。

设备自动关闭

- 确认自动省电功能已禁用。
 - 可通过 通用设置 画面 > 电源 / 显示屏 页面 > 自动省电 项目来开启 / 关闭自动省电功能。
 - 由于本设备符合欧盟待机能耗规范 (ErP)，因此无论本设备是通过交流电源适配器供电还是通过电池供电，自动省电功能都将工作。如果无需使用自动省电功能，请将其设置为“关”。（出厂默认设置为“30 秒钟”。）

无法使用本设备控件进行操作

- 确认 ϕ /I/HOLD 开关未设置为 HOLD。
- 当显示屏上显示 microSD 卡读卡器功能处于开启状态时，无法进行其他操作。

无法识别 microSD 卡

- 确认 microSD 卡已完全插入。

未输出任何声音

- 确认本设备的耳机 / 扬声器输出电平。
- 查看监听系统连接和音量级别。
- 在以下情况下，扬声器不会输出声音。
 - Ω / \sphericalangle （耳机 / 扬声器）的音量设置为“0”。
 - 通用设置 画面 > I/O 设置 页面 > 扬声器 设置为“关”（详见第 14 页的“通用设置 画面”）
 - 本设备正在录制或处于录制待机状态
 - LINE OUT 或耳机插孔正在使用中。

无法录制

- 确认 microSD 卡有足够的可用空间。
- 当文件总数达到 5000 时，无法进行录制。

输入声音非常小或非常大

- 查看输入电平的设置。（详见第 12 页的“录制和播放文件”）
- 查看连接的外部设备的输出电平。

无法删除文件

- 无法删除受保护的（只读）文件。

计算机上不显示本设备的文件

- 确认本设备已通过其 USB 端口正确连接到计算机。如果通过 USB 集线器连接，本设备可能无法正常运行。
- 确认设备画面上显示“microSD card reader”。

误设置了错误的语言

- 将 ϕ /I/HOLD 开关滑向 ϕ /I 图标，直到本设备关闭。然后，在按住 HOME [■] 按钮的同时，再次将 ϕ /I/HOLD 开关滑向 ϕ /I 图标。将会出现语言选择菜单，您可选择语言。

产生噪音

- 如果本设备靠近电视机、收音机、功放或其他带有大型变压器的设备，则本设备或附近的其他设备可能会产生噪音。（详见第 4 页的“放置和使用时的注意事项”）

内置扬声器音量低

- 沿增大音量的方向调整 Ω / \sphericalangle （耳机 / 扬声器）音量。
- 如果在录制过程中输入电平很低，即使扬声器处于最大音量，也可能很难听清声音。如果录制期间的最大输入电平接近 0 dB，则内置扬声器将以接近最大音量的状态输出
- 如果需要更大的音量，请连接带有内置放大器的外部扬声器或连接了扬声器的放大器。

日期 / 时间不正确

- 可通过通用设置 画面 > 系统 页面 > 日期时间设置 项目再次进行设置。（详见第 14 页的“通用设置 画面”）

规格 / 额定值

录音机规格

录制介质

- microSD 卡 (64 MB-2 GB)
- microSDHC 卡 (4 GB-32 GB)
- microSDXC 卡 (48 GB-512 GB)

录制 / 播放格式

- WAV (BWF) : 44.1/48/96/192 kHz,
16/24-bit 或 32-bit 浮点
- MP3 : 44.1/48 kHz, 128/192/256/320 kbps

声道数

- 输入声道 : 最多 6 声道
 - 录制音轨 : 最多 8 音轨
-

模拟音频输入额定值

麦克风输入 (平衡)

输入插孔 3/4/5/6 (输入设置为“MIC”)

- 连接器 :
 - 相当于 XLR-3-31 (1 : GND, 2 : HOT, 3 : COLD)
 - 6.3mm (1/4") 标准 TRS 插孔 (Tip : HOT,
Ring : COLD,
Sleeve : GND)

(仅 XLR 支持幻象电源)

- 输入阻抗 : 2.2 k Ω 或更高
- 最大输入电平 : +2 dBu
- 最小输入电平 : -75 dBu

输入插孔 3/4/5/6 (输入设置为“LINE”)

- 连接器 :
 - 相当于 XLR-3-31 (1 : GND, 2 : HOT, 3 : COLD)
 - 6.3mm (1/4") 标准 TRS 插孔
 - 输入阻抗 : 9 k Ω 或更高
 - 标称输入电平 : +4 dBu (最小增益设置)
 - 最大输入电平 : +24 dBu
 - 最小输入电平 : -53 dBu

麦克风输入 (不平衡) : 输入插孔 1/2 (支持插入式电源)

- 连接器 : 3.5mm (1/8") 标准 TRS 插孔
- 输入阻抗 : 85 k Ω 或更高
- 最大输入电平 : +1 dBV
- 最小输入电平 : -69.3 dBV

线路输入 (不平衡) : EXT IN 插孔

- 连接器 : 3.5mm (1/8") 标准 TRS 插孔
 - 输入阻抗 : 8.5 k Ω 或更高
 - 标称输入电平 : -10 dBV (最小增益设置)
 - 最大输入电平 : +10 dBV
 - 最小输入电平 : -48 dBV
-

模拟音频输出

线路输出 (不平衡) : LINE OUT 插孔

- 连接器 : 3.5mm (1/8") 标准 TRS 插孔
- 输出阻抗 : 200 Ω
- 标称输出电平 : -14 dBV
- 最大输出电平 : +6 dBV

耳机输出 : 耳机插孔

- 连接器 : 3.5mm (1/8") 标准 TRS 插孔
- 最大输出 : 45 mW + 45 mW (总谐波失真 +N 0.1%
或更小, 转入 32 Ω 负载)

内置扬声器

- 0.4 W (单声道)
-

控制输入 / 输出额定标准

USB 端口

- 连接器 : C 型
- 格式 : USB 2.0 高速, 大容量存储类

蓝牙设备连接器

- 仅适用于蓝牙适配器 (AK-BT1)

音频性能

频率响应

- 输入插孔 1-6 和 EXT IN 插孔 \rightarrow PCM 数据
- 20 Hz - 20 kHz 在 48 kHz: +0/-0.3 dB (JEITA)
- 20 Hz - 60 kHz 在 192 kHz: +0/-2.5 dB (JEITA)

信噪比

- 输入插孔 1-2 \rightarrow PCM 数据 (20 kHz SPCL LPF,
A-weighting 滤波器)
- 101 dB (48 kHz)
- 输入插孔 3-6 和 EXT IN 插孔 \rightarrow PCM 数据 (20 kHz SPCL
LPF, A-weighting 滤波器)
- 102 dB (48 kHz)

总谐波失真率 (THD+N)

- 输入插孔 1-2 \rightarrow PCM 数据 (1 kHz 正弦波, -5 dBFS 输入,
最小增益, 20 kHz SPCL LPF)
- 0.005%
- 输入插孔 3-6 (LINE IN) \rightarrow PCM 数据 (1 kHz 正弦波,
-5 dBFS 输入, 最小增益, 20 kHz SPCL LPF)
- 0.008%
- 输入插孔 3-6 (MIC IN) \rightarrow PCM 数据 (1 kHz 正弦波,
-5 dBFS 输入, 最小增益, 20 kHz SPCL LPF)
- 0.006%

注释 : JEITA 表示符合 JEITA CP-2150

录制时间（以小时：分钟计）

文件格式（录制设置）		卡容量 (32GB)
320 kbps MP3 (立体声)	44.1 kHz	222:13
16-bit WAV (立体声)		50:23
24-bit WAV (立体声)	96 kHz	15:25
24-bit WAV (立体声)	192 kHz	7:42
32-bit 浮点 WAV (立体声)	192 kHz	5:47

- 上述录制时间为估计值。根据所使用的 microSD 卡、microSDHC 卡或 microSDXC 卡，录制时间可能不同。
- 上述录制时间不是连续录制时间，而是 microSD 卡 / microSDHC 卡 / microSDXC 卡可能的总录制时间。
- 如果以单声道录制，最长录制时间将约为上述时间的两倍。
- 如果以双声道录制，最长录制时间将约为上述时间的一半。

其他

电源

- 4 节五号电池（碱性、镍氢或锂离子）
- 来自计算机的 USB 总线电源
- 交流电源适配器（TASCAM PS-P520U，另购）

功耗

7.5 W（最大）

蓝牙

- 蓝牙版本：5.0（低功耗蓝牙）
- 传输距离：约10m*
- 使用频率范围：2.4GHz频段

* 传输距离仅为估计值，可能会因周围环境和无线电波条件而异。

电池运行时间（连续操作）

- 使用碱性电池（EVOLTA）

使用条件	运行时间
通过输入插孔 1/2 输入（随附麦克风） 幻象电源未使用 STEREO WAV (BWF) /44.1 kHz 24-Bit 录制 省电模式 启动	约 11:00
通过输入插孔 1/2 输入（随附麦克风）和输入插孔 5/6 输入 使用幻象电源（+48 V，3 mA×2 负载） STEREO WAV (BWF) /44.1 kHz 24-Bit 录制 省电模式 启动	约 5:30

- 使用镍氢电池（eneloop）

使用条件	运行时间
通过输入插孔 1/2 输入（随附麦克风） 幻象电源未使用 STEREO WAV (BWF) /44.1 kHz 24-Bit 录制 省电模式 启动	约 9:30
通过输入插孔 1/2 输入（随附麦克风）和输入插孔 5/6 输入 使用幻象电源（+48 V，3 mA×2 负载） STEREO WAV (BWF) /44.1 kHz 24-Bit 录制 省电模式 启动	约 5:30

- 使用锂离子电池（劲量终极锂电）

使用条件	运行时间
通过输入插孔 1/2 输入（随附麦克风） 幻象电源未使用 STEREO WAV (BWF) /44.1 kHz 24-Bit 录制 省电模式 启动	约 18:00
通过输入插孔 1/2 输入（随附麦克风）和输入插孔 5/6 输入 使用幻象电源（+48 V，3 mA×2 负载） STEREO WAV (BWF) /44.1 kHz 24-Bit 录制 省电模式 启动	约 10:00

注释

使用幻象电源时，根据所使用麦克风的类型，运行时间可能会缩短。

尺寸

77 × 40 × 205.6 mm（宽 × 高 × 深，不包含凸起部分）

重量

472/381 g（附带 / 不附带电池）

工作温度范围

0-40°C

- 本手册中的插图可能与实际产品存在部分不同。
- 为进行产品改进，规格和外观如有变更，恕不另行通知。

OWNER'S MANUAL

IMPORTANT SAFETY INSTRUCTIONS

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - Caution should be taken when using earphones or headphones with the product because excessive sound pressure (volume) from earphones or headphones can cause hearing loss.
 - If you are experiencing problems with this product, contact TEAC for a service referral. Do not use the product until it has been repaired.

WARNING

- To prevent possible hearing damage, do not listen at high volume levels for long periods.



CAUTION

- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- If the product uses batteries (including a battery pack or installed batteries), they should not be exposed to sunshine, fire or excessive heat.
- CAUTION for products that use replaceable lithium batteries: there is danger of explosion if a battery is replaced with an incorrect type of battery. Replace only with the same or equivalent type.

CAUTIONS ABOUT BATTERIES

This product uses batteries. Misuse of batteries could cause a leak, rupture or other trouble. Always abide by the following precautions when using batteries.

- Never recharge non-rechargeable batteries. The batteries could rupture or leak, causing fire or injury.
- When installing batteries, pay attention to the polarity indications (plus/minus (⊕/⊖) orientation), and install them correctly in the battery compartment as indicated. Putting them in backward could make the batteries rupture or leak, causing fire, injury or stains around them.
- When you store or dispose batteries, isolate their terminals with insulation tape or something like that to prevent them from contacting other batteries or metallic objects.
- When throwing used batteries away, follow the disposal instructions indicated on the batteries and the local disposal laws.
- Do not use batteries other than those specified. Do not mix and use new and old batteries or different types of batteries together. The batteries could rupture or leak, causing fire, injury or stains around them.
- Do not carry or store batteries together with small metal objects. The batteries could short, causing leak, rupture or other trouble.
- Do not heat or disassemble batteries. Do not put them in fire or water. Batteries could rupture or leak, causing fire, injury or stains around them.
- If the battery fluid leaks, wipe away any fluid on the battery case before inserting new batteries. If the battery fluid gets in an eye, it could cause loss of eyesight. If fluid does enter an eye, wash it out thoroughly with clean water without rubbing the eye and then consult a doctor immediately. If the fluid gets on a person's body or clothing, it could cause skin injuries or burns. If this should happen, wash it off with clean water and then consult a doctor immediately.
- The unit power should be off when you install and replace batteries.
- Remove the batteries if you do not plan to use the unit for a long time. Batteries could rupture or leak, causing fire, injury or stains around them. If the battery fluid leaks, wipe away any fluid on the battery compartment before inserting new batteries.
- Do not disassemble a battery. The acid inside the battery could harm skin or clothing.

Precautions for placement and use

- The operating temperature range of this unit is 0–40 °C.
- Do not install this unit in the following types of locations. Doing so could degrade the sound quality and/or cause malfunctions.
 - Places with significant vibrations
 - Next to a window or in another location exposed to direct sunlight
 - Near heaters or other extremely hot places
 - Extremely cold places
 - Very humid or poorly ventilated places
 - Very dusty places
 - Places exposed directly to rain or other water
- If this unit is placed near a power amplifier or other device with a large transformer, it could cause a hum. If this occurs, increase the distance between this unit and the other device.
- This unit could cause color irregularities on a TV screen or noise from a radio if used nearby. If this occurs, use this unit farther away.
- This unit might produce noise if a mobile phone or other wireless device is used nearby to make calls or send or receive signals. If this occurs, increase the distance between this unit and those devices or turn them off.
- Do not place this unit on top of a power amplifier or other device that generates heat.

Beware of condensation

Condensation could occur if the unit is moved from a cold place to a warm place, it is used immediately after a cold room has been heated or it is otherwise exposed to a sudden temperature change. To prevent this, or if this occurs, let the unit sit for one or two hours at the new room temperature before using it.

Cleaning the unit

Use a dry soft cloth to wipe the unit clean. Do not wipe with chemical cleaning cloths, thinner, alcohol or other chemical agents. Doing so could damage the surface or cause discoloration.

Wireless equipment

Compliance of radio transmitter and interference

CMIIT ID: 2021DJ6698

(This device contains certified RF module which certificate number is CMIIT ID: 2021DJ6698)

This product has the function of broadband transmitter using 2.4GHz Band.

Use frequency range: 2402 MHz - 2480 MHz

Maximum output power: Bluetooth® Class 2 (less than 2.5 mW)

Please use only in the country where you purchased the product. Depending on the country, restrictions on the use of Bluetooth wireless technology might exist.

Radiation Exposure requirements

This equipment meets the regulation, which is recognized internationally, for the case of human exposure to radio waves generated by the transmitter.

Bluetooth®

ATTENTION

The Bluetooth function of this unit is not guaranteed to enable connection or operation with all Bluetooth devices.

Transmission security

This unit supports security functions during Bluetooth transmission in accordance with the Bluetooth standard specifications, but it does not guarantee the privacy of such transmissions.

TEAC CORPORATION will bear no responsibility should an information leak occur during transmission by Bluetooth.

Introduction

Thank you very much for purchasing the TASCAM Portacapture X8.

Before using this unit, read this Owner's Manual carefully so that you will be able to use it correctly and enjoy working with it for many years. After you have finished reading this manual, please keep it in a safe place for future reference. You can also download this Owner's Manual from the TASCAM web site.

Note about the Reference Manual

This Owner's Manual explains the main functions of this unit. Please see the Reference Manual for information about all the unit's functions.

You can download the Reference Manual from the TASCAM web site.

About TASCAM customer support service

TASCAM products are supported and warranted only in their country/region of purchase.

To receive support after purchase, on the TASCAM Distributors list page of the TEAC Global Site (<https://teac-global.com/>), search for the local company or representative for the region where you purchased the product and contact that organization.

When making inquiries, the address (URL) of the shop or web shop where it was purchased and the purchase date are required. Moreover, the warranty card and proof of purchase might also be necessary.

Contents

IMPORTANT SAFETY INSTRUCTIONS.....	23
Precautions for placement and use	24
Beware of condensation.....	24
Cleaning the unit.....	24
Wireless equipment.....	25
Compliance of radio transmitter and interference	25
Radiation Exposure requirements.....	25
Bluetooth®.....	25
Transmission security.....	25
Introduction	26
Note about the Reference Manual.....	26
About TASCAM customer support service	26
Items included with this product	27
Accessories sold separately	27
Names of Parts.....	28
Quick Start Guide	29
Connecting the included mics	29
Inserting microSD cards.....	29
Powering the unit.....	30
Turning the power on and off.....	30
Setting the language, date and time	31
Formatting (initializing) microSD cards.....	31
Basic screen operations.....	32
Recording and playing files	33
Useful features.....	35
LAUNCHER	35
Controlling this unit from a smartphone.....	36
Connecting cameras	37
Connecting computers and smartphones by USB.....	37
Recording operation flow	38

Troubleshooting.....	40
Specifications/rated values.....	41
Recorder specifications	41
Analog audio input ratings.....	41
Analog audio output.....	41
Control input/output ratings	41
Audio performance	41
Recording times (in hours: minutes)	42
Other	42

Information is given about products in this manual only for the purpose of example and does not indicate any guarantees against infringements of third-party intellectual property rights and other rights related to them. TEAC Corporation will bear no responsibility for infringements on third-party intellectual property rights or other liabilities that occur as a result of the use of this product.

 
Properties copyrighted by third parties cannot be used for any purpose other than personal enjoyment and the like without the permission of the right holders recognized by copyright law. Always use this equipment properly. TEAC Corporation will bear no responsibility for rights infringements committed by users of this product.



https://tascam.jp/int/product/portacapture_x8/docs

Items included with this product


This product includes the following items.
Keep the packing materials for transportation in the future.
Please contact the store where you purchased this unit if any of these items are missing or have been damaged during transportation.



Main unit × 1




 Included mics × 1
(left/right pair)



AA alkaline batteries × 4

 Owner's Manual × 1
(this document
including warranty)



AK-BT1
Bluetooth adapter × 1

Accessories sold separately

This product does not include the following items.
Please purchase any that you need for your uses.

- microSD cards
This is necessary to record and play files with this unit.
This unit can use microSD cards that are Class 10 or higher and compatible with SD, SDHC or SDXC standards.
A list of microSD cards that have been confirmed for use with this unit can be found on the TASCAM website (https://tascam.jp/int/product/portacapture_x8/docs).
Alternatively, please contact TASCAM customer support service.
- USB cables (for communication or data transmission)
A USB cable must be prepared to connect this unit to a computer (Windows/Mac) or smartphone.
This unit has a USB Type-C port.
Prepare a USB cable suitable for the USB port of the computer or smartphone being used.
- USB cables designed only for charging cannot be used.

Connecting to an iOS device with a lightning port

A genuine Apple Lightning to USB Camera Adapter and a commercially-available Type-A to Type-C cable are necessary.

Connecting to a computer or smartphone with a USB Type-C port

A commercially-available Type-C to Type-C cable is necessary.

Connecting to a smartphone with a USB micro-B port

A commercially-available micro-B to Type-C cable is necessary.

Connecting to a computer with a USB Type-A port


A commercially-available Type-A to Type-C cable is necessary.

- PS-P520U AC adapter
This is necessary to operate this unit using AC power supply.

NOTE

This unit does not have a battery charging function when using an AC adapter.

Names of Parts

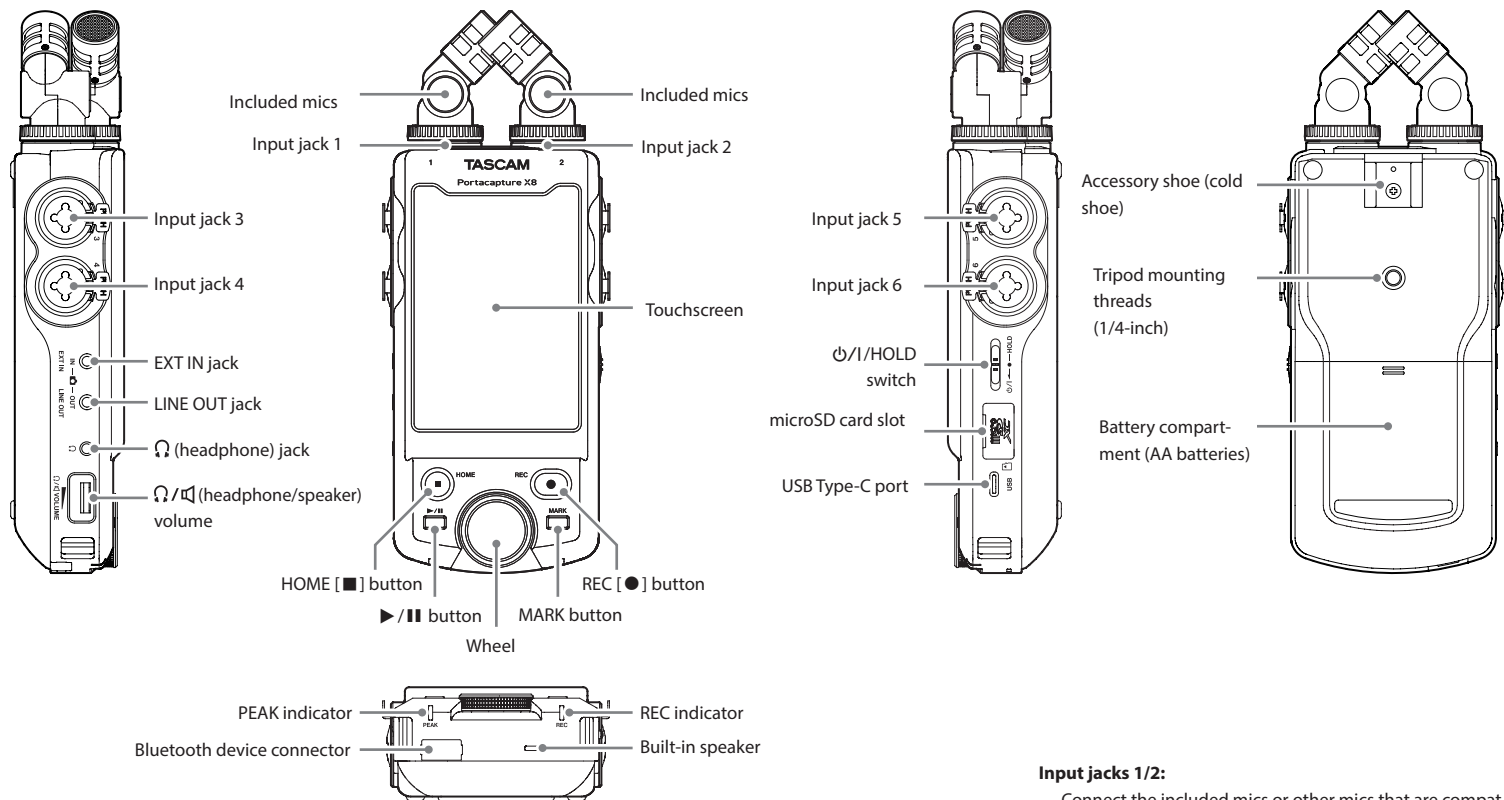

Bluetooth device connector:
Connect and use an AK-BT1 Bluetooth adapter here.(see
“Controlling this unit from a smartphone” on page 36)

The included mics can be connected in two ways.
(see “Connecting the included mics” on page 29)

Input jacks 1/2:

Connect the included mics or other mics that are compatible with plug-in power to use these (3.5mm TRS)

Input jacks 3/4/5/6:

Connect other mics or line output devices to use these (XLR/TRS)

Quick Start Guide

Connecting the included mics

The included mics can be connected in two ways.


X-Y connection

This enables recording with a clear stereo field and reduced phase difference.


A-B stereo connection

This enables recording with a wide left-right stereo field.

1. Connect the mics so that their the metallic discs face the same direction as the touchscreen.

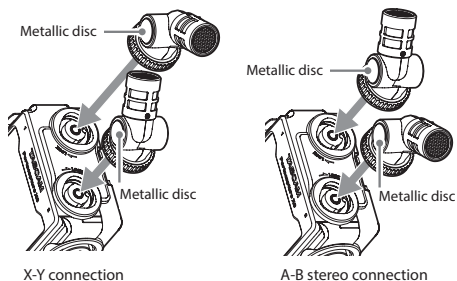

2. Turn their locking rings to fix them in place.

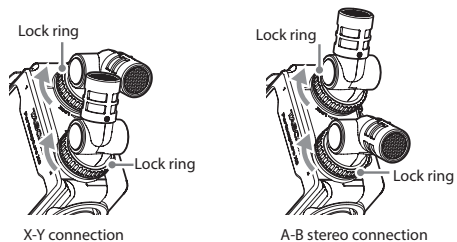

The included mics become usable by turning their lock rings completely until they are tight.

The included mics will not be recognized if their lock rings have not been turned completely.

Always use the included mics together as a pair.

NOTE


- Reverse these procedures to disconnect the mics.
- The angles of the included mics cannot be adjusted.
- The included mics cannot be rotated.

TIP

Input jacks 1/2 support plug-in power and can be used to connect lavalier mics with standard 3.5mm (1/8") TRS plugs (Tip: HOT, Ring: COLD, Sleeve: GND).

Inserting microSD cards

Open the microSD slot cover and insert a microSD card.

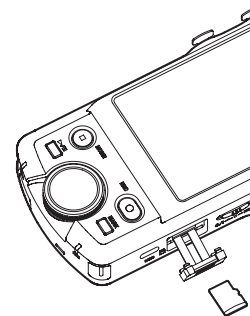

NOTE

microSD cards are delicate media.

In order to avoid damaging microSD cards, take the following precautions when handling them.


- Do not leave them in extremely hot or cold places.
- Do not leave them in extremely humid places.
- Do not let them get wet.
- Do not put things on top of them or twist them.
- Do not hit them.
- Do not remove or insert them during recording, playback, data transmission or other access.
- When transporting them, put them into cases, for example.

Powering the unit

This unit can be powered in two ways: with AA batteries or by external power using the USB port.

Using AA batteries

1. Remove the battery compartment cover, and insert 4 AA batteries with their ⊕ and ⊖ marks oriented as shown.
2. Reattach the battery compartment cover.

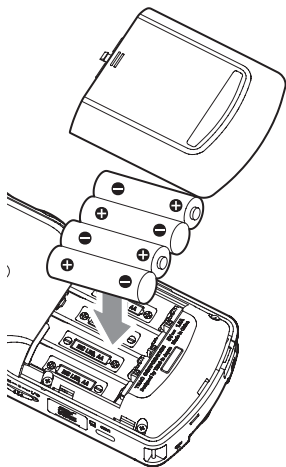

NOTE


- This unit cannot recharge Ni-MH batteries. Use a commercially available recharger.
- The included alkaline batteries are for confirming operation of the unit and might not last very long.

Using external power

Connect the USB port on the unit to an external power supply.

This illustration below is an example of connecting a PS-P520U AC adapter (sold separately) to the unit.

TASCAM PS-P520U (sold separately)

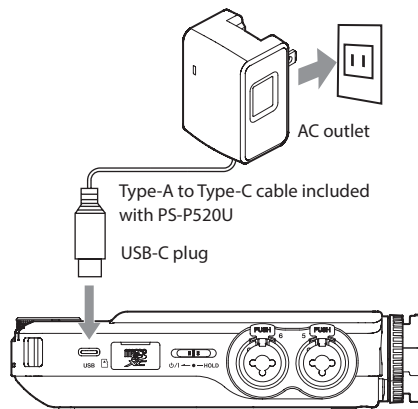

CAUTION

We highly recommend using the AC adapter designed for use with this unit (PS-P520U sold separately). When using another external power supply, use one with the following specifications.

- Supplied voltage: 5 V
- Supplied current: 1.5A or more

Using an external power supply with specifications other than the above could cause malfunction, overheating, fire or other problems.

If anything abnormal occurs, stop use and contact the retailer where you purchased the unit or a TEAC service center to request repair.

NOTE

- If an external power supply that provides current less

than 1.5 A is connected, the unit will automatically enable the POWER SAVE MODE, restricting some functions.

- When using the factory default setting, if an external power supply is connected, power from it will be used even if batteries are also installed.

Power supply settings can be changed with the GENERAL SETTINGS screen > POWER/DISPLAY page > POWER SOURCE SELECT item.

- See the Reference Manual for details.

Turning the power on and off

Turning the power on

Slide the ϕ /I/HOLD switch toward ϕ /I until the display is activated. Then, release the switch.

When the unit starts up, the touchscreen display becomes active.



The first time the unit is started, the LANGUAGE screen will open. From the second time, the HOME screen of the app selected on the LAUNCHER screen when the unit was last turned off will reopen.


Turning the power off

Slide the ϕ /I/HOLD switch toward ϕ /I until the display is deactivated. Then, release the switch.

Setting the language, date and time

Selecting the language

The first time the unit is turned on after purchase, the LANGUAGE screen will open.

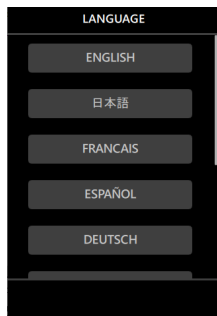

1. Swipe the screen vertically to find the desired language.

Options

ENGLISH: Use English (default setting)

日本語: Use Japanese

FRANCAIS: Use French

ESPAÑOL: Use Spanish

DEUTSCH: Use German

ITALIANO: Use Italian

中文: Use Chinese

한글: Use Korean

русский язык: Use Russian


2. Tap the desired language to set it.

NOTE

The language setting can be set again using the GENERAL SETTINGS screen > SYSTEM page > LANGUAGE item. See the Reference Manual for details.

Setting the date and time

After setting the language and whenever the date and time has been reset, the DATE/TIME screen will open to enable setting them.

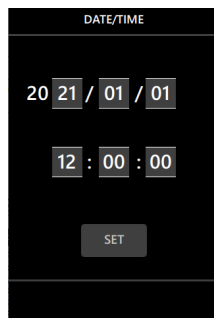

1. Touch and swipe the numbers to set the date and time.
2. Tap the SET button to confirm the settings.


NOTE

- After the date and time are set, the format confirmation screen will open if a microSD card that requires formatting is loaded.
- Date and time settings can also be changed using the GENERAL SETTINGS screen > SYSTEM page > DATE/TIME item. (see "Power will not turn on" on page 40)

Formatting (initializing) microSD cards

The following message will appear if an unformatted card is loaded.

Tap QUICK FORMAT or ERASE FORMAT to start formatting.

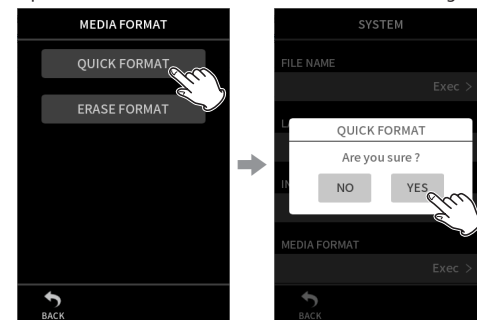

- We recommend using ERASE FORMAT when formatting microSD cards the first time they are used with this unit.
- After formatting completes successfully, the LAUNCHER (app selection) screen will open.

CAUTION

Formatting will erase all data on a microSD card.

Back up to a computer, for example before formatting a card.

NOTE

- Formatting can also be executed using the GENERAL SETTINGS screen > SYSTEM page > MEDIA FORMAT item. (see "Power will not turn on" on page 40)
- Using the ERASE FORMAT option might improve writing performance that has decreased due to repeated use. If "Write error REC continue" or "Card slow Check BOF MARK" appears during recording, format the card using the ERASE FORMAT option.
- ERASE FORMAT checks the memory for errors while formatting, so it takes more time than QUICK FORMAT.

Basic screen operations


Functions can be set and adjusted by tapping, swiping and sliding on the touchscreen of this unit.

The first time the unit is started, after setting the language, date and time, the LAUNCHER screen will open.


The LAUNCHER screen can be used to launch various recording apps and setting screens.

Launching recording apps


1. As shown in the illustration below, swipe the middle of the screen to select the app to launch.

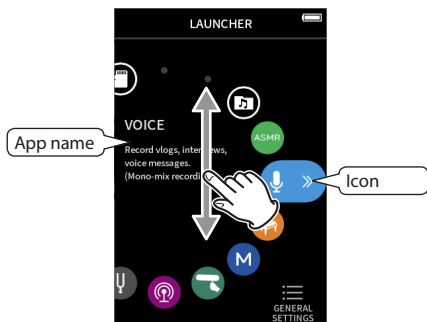

2. Tap its icon to launch the app.

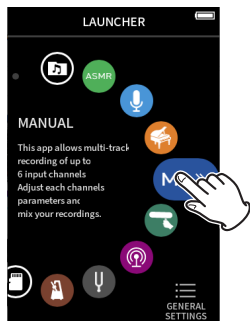


The recording app HOME screen will open.

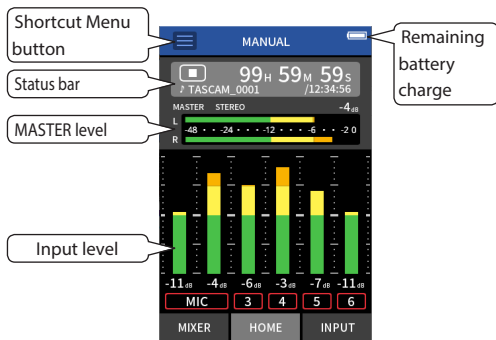

MANUAL recording app example


Switching screens

Tap the name of the screen at the bottom of the display to switch to it.

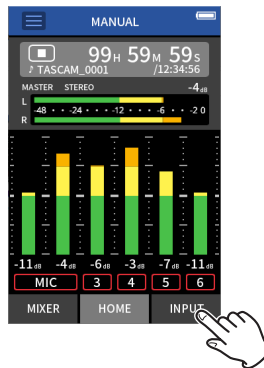


Returning to the LAUNCHER screen

1. Tap the Shortcut Menu button at the top of the screen.

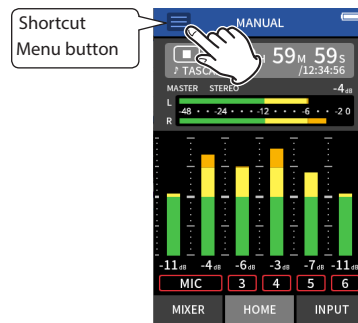

The Shortcut Menu will open at the bottom of the screen.

2. Tap the LAUNCHER icon in the Shortcut Menu.

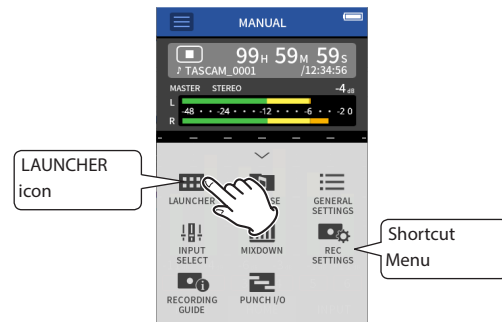

The LAUNCHER screen will reopen.

Recording and playing files

Recording


To record, open the recording app shown on the LAUNCHER screen that suits the type of recording (see “Recording apps” on page 35).

After launching the recording app, the input levels of each track and their mix must also be set in order to conduct recording at suitable levels.

This unit has a Recording Guide function designed to prevent users from accidentally skipping important steps or doing them out of order. This function can only be used with the MANUAL app. (When shipped new the Recording Guide function is on by default.)

After the MANUAL app is launched, operation procedures will be shown. Follow their instructions to make adjustments.

When the Recording Guide function is active, setting screens open in the following order, enabling settings to be made in the correct sequence.

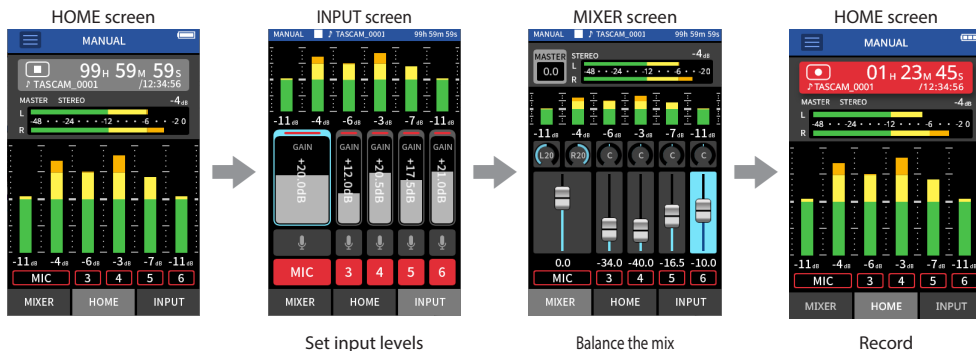

NOTE


- By default (Recording Guide function activated), recording cannot be started before proceeding through the guided steps to the MIXER screen.
- If the Recording Guide function is not needed, open the MANUAL app HOME screen, press the Shortcut Menu, and set “RECORDING GUIDE” to “OFF”. This enables recording to be started from other screens in addition to the MIXER screen.
- See “Recording operation flow” on page 38 for differences in recording operations when the Recording Guide function is on or off.

In this manual, recording procedures are explained for the MANUAL app (with the Recording Guide function on), which is the basic way to use the unit.

See the Reference Manual for explanations of recording procedures using other apps.

Procedure 1: Launch the recording app


1. Launch the MANUAL app on the LAUNCHER screen.

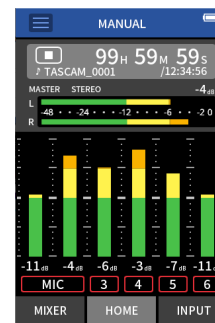

The recording app HOME screen will open.

Procedure 2: Set input levels

 
1. Press the REC [●] button on the unit.



The REC indicator will blink.


2. Tap INPUT at the bottom right of the screen to open the INPUT screen.

3. Tap MIC or numbers 3 to 6 to turn the recording tracks on/off.

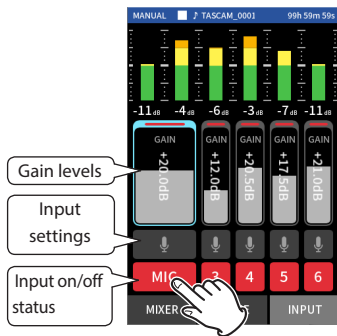

Tracks shown with red backgrounds will be recorded.

4. Slide the track GAIN faders to adjust their input levels.

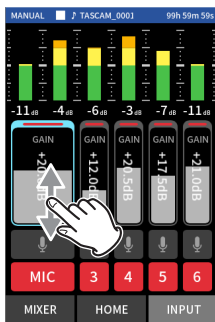


While watching the level meters, adjust the GAIN faders until the highest that the meters reach is about -12 dB.

NOTE


If an input level exceeds -2 dB, the PEAK indicator on the unit will light.

Procedure 3: Set the mixer

1. Tap MIXER at the bottom left of the screen to open the MIXER screen.

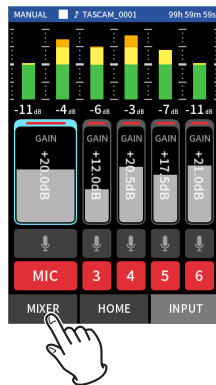


2. Slide the faders of each track to adjust the balance of levels sent to the MASTER.

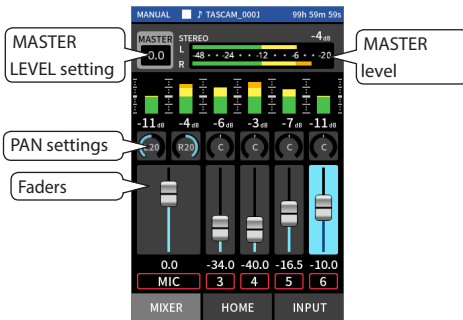


- If the input level is too low the recorded sound will be quiet, but if it is too high the sound will be distorted (or break up).

Procedure 4: Start recording

 1. Press the REC (●) button to start recording.



When recording starts, the REC indicator will light.

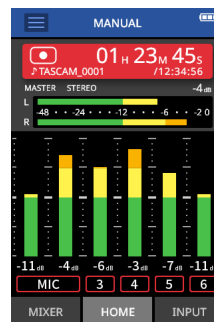

2. Press the HOME (■) button to stop recording.



When recording stops, the REC indicator will become unlit.

Starting playback

Press the ►/|| button to start playback.

NOTE

To listen to the playback sound through the built-in speaker, set the GENERAL SETTINGS screen > I/O SETTINGS page > SPEAKER item to ON. This is set to OFF when shipped new from the factory.

Pausing playback

During playback, press the ►/|| or HOME [■] button to pause playback.

Press the ►/|| button again to resume playback.

Stopping playback

Press the HOME [■] button when paused or playing to return to the beginning of the file.

NOTE

See the Reference Manual for explanations of the other playback functions.

Listening with headphones

Connect headphones to the Ω (headphone) jack.

CAUTION

Before connecting headphones, lower the Ω/□ (headphone/speaker) volume control to the minimum level. Failure to do so might cause sudden loud noises, which could harm your hearing or result in other trouble.

Adjusting the volume


Use the Ω/□ (headphone/speaker) volume control to adjust the volume output from the built-in speaker and headphones.

Useful features

Here are examples of some functions. See the Reference Manual for details about use and other functions.



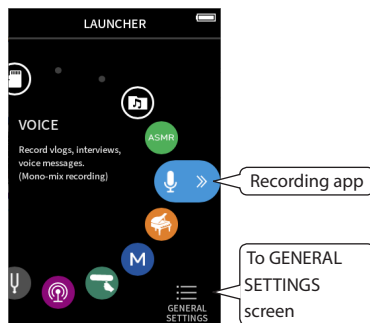

LAUNCHER



The LAUNCHER can be used to launch recording apps and open setting screens.



Recording apps

The following apps for typical recording situations are available.

MANUAL 	This is the basic app of the unit. Multitrack recording of up to six channels is possible.
VOICE 	This recording app is good for capturing interviews and meetings.
PODCAST 	This app is good for recording podcasts with up to four people.
MUSIC 	This recording app is good for easily capturing instrumental and vocal performances.


FIELD 	This recording app is good for recording outdoors.
ASMR 	The screen effect changes in response to the input sound in this app.

NOTE

The designs and functions of apps and other features could change with firmware updates.

GENERAL SETTINGS screen

Tap items to make detailed settings for the unit.

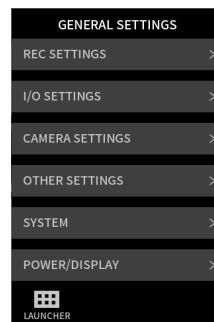

See the Reference Manual for information about all the settings.

Controlling this unit from a smartphone

When an AK-BT1 Bluetooth adapter is connected to the Bluetooth device connector of this unit, this unit can be controlled from an iOS/Android device using a controller app.

Procedure 1: Installing the dedicated smartphone app

1. Connect the smartphone to the Internet.
2. Search for "X8 CONTROL" on the App Store for an iOS device. Then, download and install it. For Android devices, please get the APK file from the TASCAM website.



https://tascam.cn/product/portacapture_x8/download



- Please be aware that you are responsible for any transmission costs related to Internet connection.

Procedure 2: Connecting with this unit using Bluetooth

1. Remove the cover from the Bluetooth connection device port on this unit, and install an AK-BT1 in it.

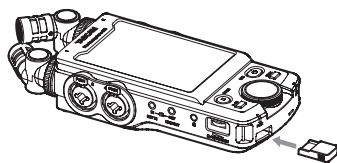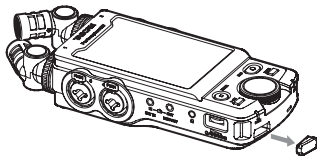


- Insert it so that the connector is toward the screen.
2. Enable Bluetooth connection on the smartphone or tablet.

NOTE


Refer to the operation manual of the Bluetooth device for procedures.

3. Use the smartphone or tablet to launch Portacapture Control.

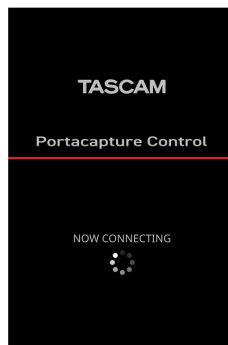

Bluetooth device screen

4. If the unit is not turned on, turn it on.
5. On the unit, turn the GENERAL SETTINGS screen > OTHER SETTINGS page > BLUETOOTH item on.

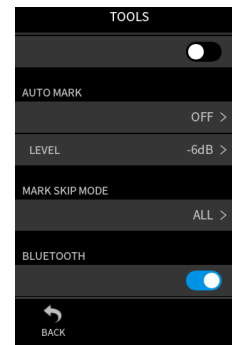


When connection completes, the display of the smartphone or tablet will automatically switch to the operation screen.

The AK-BT1 access indicator (blue) shows the connection status.

Indicator	Status
Unlit	Not paired
Blinking	Waiting to pair
Lit	Paired

Procedure 3: Using the dedicated smartphone app

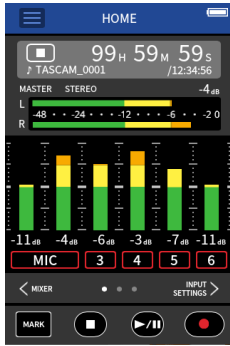

The four buttons at the bottom of the screen correspond to the physical buttons on the unit, and tapping them performs the same functions.

MARK: corresponds to MARK button on unit

- : corresponds to stop button
- ▶: corresponds to play button
- : corresponds to REC button

- Other operations are the same as using the touchscreen on the unit.

NOTE

Monitoring recording is not possible on paired devices. Use the headphone jack on the unit.


Connecting cameras

The following functions can be used when connected to a Digital SLR camera.

- Output slate tones and set levels
- Lower the LINE OUT jack output level to suit the camera

TIP

Slate tones are signals input simultaneously into both the audio of video files and the files recorded by this unit. They can be used to synchronize audio when editing video files.

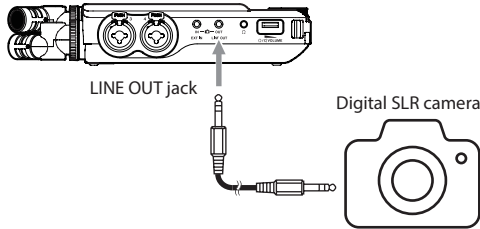

Connecting computers and smartphones by USB


The following functions can be used when connected by USB to a computer (Windows/Mac) or smartphone.

- Use the unit as a USB mic
- Simultaneously record to a computer while recording on the microSD card in the unit (backup recording)
- Monitor sound from the computer
- Add sound through the unit's mics to sound playing on the computer and stream it live on the Internet (loopback)
- Use as a microSD card reader (when connected to a computer only)

NOTE


A USB cable (sold separately) must be prepared to connect this unit to a computer or smartphone. (see "Accessories sold separately" on page 27)

USB Type-C port

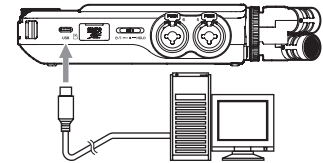



USB cable


Computer

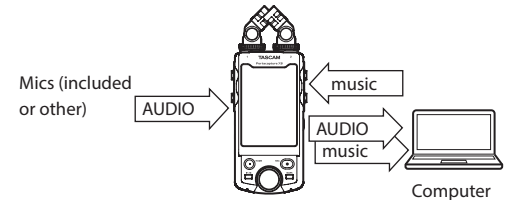

Recording operation flow

This unit has Recording Guide¹ and REC Pause² functions. Depending on their on/off settings, pressing buttons will have the following effects.

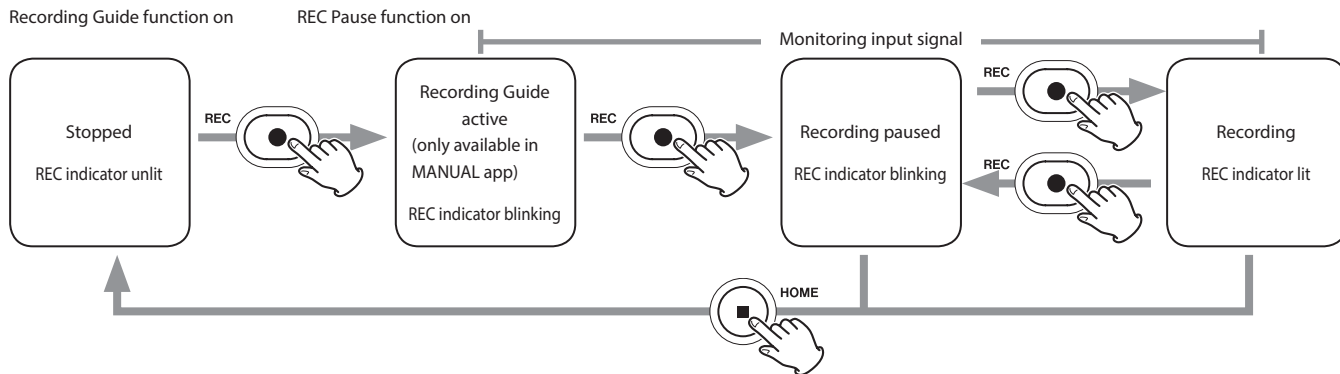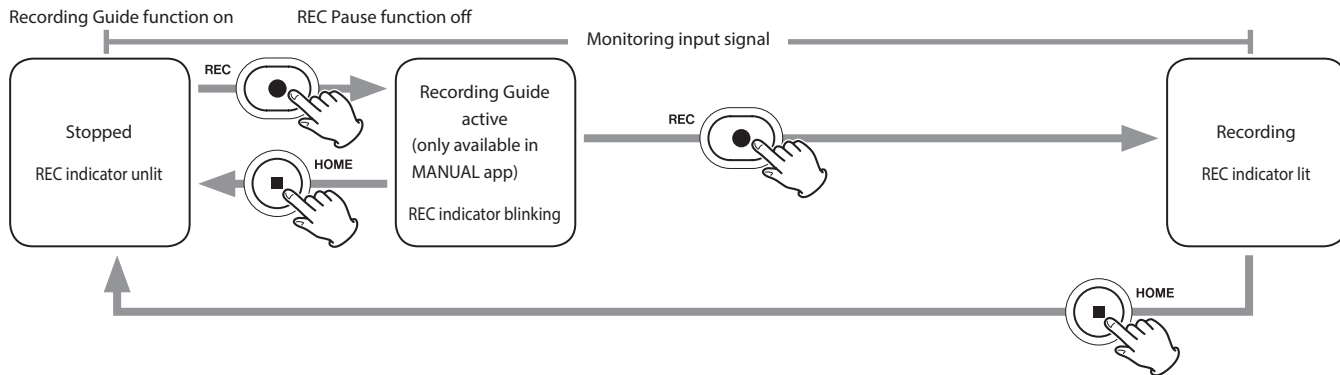

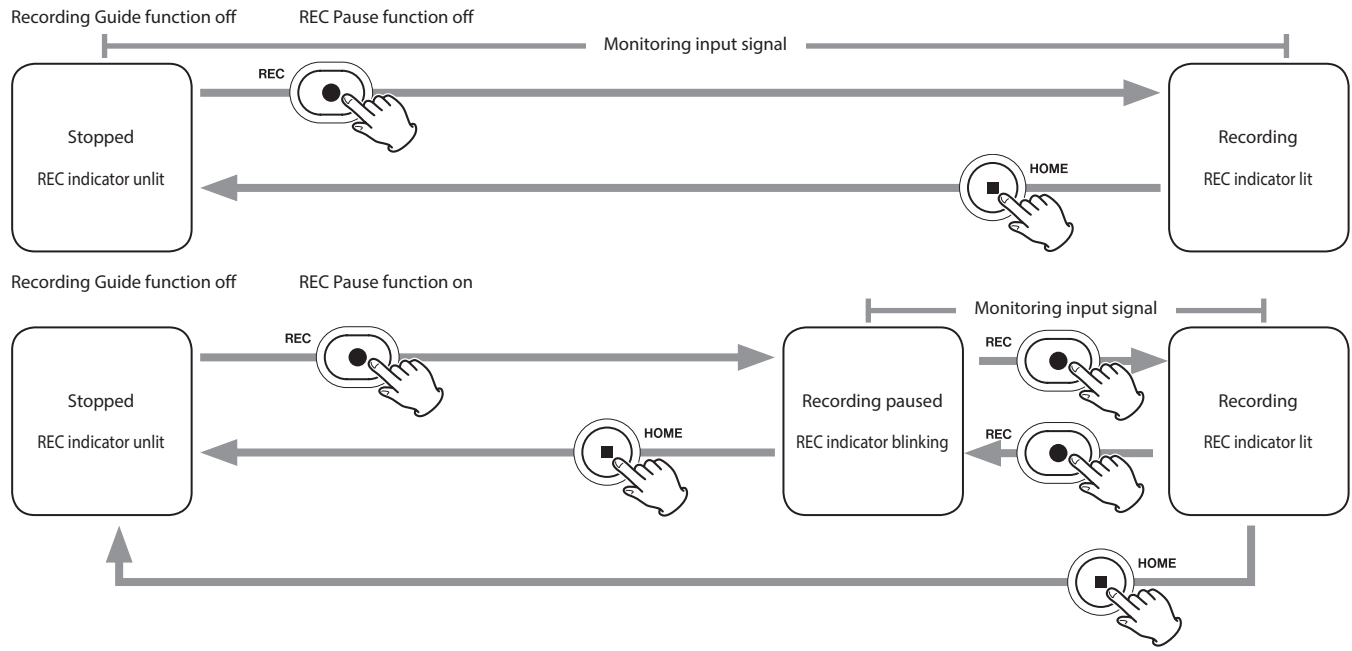

¹ The Recording Guide function can only be used with the MANUAL app. With apps other than the MANUAL app, the Recording Guide function will be disabled regardless of its on/off setting.

² This unit has a REC Pause function that causes it to start monitoring the input signal when the REC [●] button is pressed. This function can be used with all recording apps. The REC Pause function can be used to reduce power consumption when recording is stopped. In addition, a recording can be started and paused repeatedly without stopping to save it as a single file. The REC Pause function is off when shipped new from the factory. When the REC Pause function is off, the input signal is always monitored when a recording app is active. When the REC Pause function is on, the input signal is only monitored when the Recording Guide function is active, recording is paused or recording is in progress. The REC Pause function can be set on the GENERAL SETTINGS screen > REC SETTINGS page.

Troubleshooting

If you are having trouble with the operation of this unit, please check the following before seeking repair. If these measures do not solve the problem, please contact the store where you purchased this unit or TASCAM customer support service.

Power will not turn on

- Confirm that the ϕ /I/HOLD switch is not set to HOLD.
- Confirm that batteries are installed correctly.
- Confirm that the TASCAM PS-P520U AC adapter (sold separately) power plug and the USB connector are securely connected. The unit might not operate properly through a USB hub.

The unit turns off automatically

- Confirm that the automatic power saving function is disabled.
 - The automatic power saving function can be turned on/off using the GENERAL SETTINGS screen > POWER/DISPLAY page > AUTO POWER SAVE item.
 - Since this unit complies with the European Standby Power Regulations (ErP), the automatic power saving function operates regardless of whether the unit is being powered by an AC adapter or batteries. If you do not want to use the automatic power saving function, set it to "OFF". (The factory default setting is "30 min".)

Operation is not possible using the unit controls

- Confirm that the ϕ /I/HOLD switch is not set to HOLD.
- When the microSD card reader function is active on the display, other operation is not possible.

The microSD card is not recognized

- Confirm that the microSD card is inserted completely.

No sound is output

- Confirm the unit's headphone/speaker output level.
- Check the monitoring system connections and volume level.
- No sound is output from the speaker in the following conditions.
 - The Ω / \square (headphone/speaker) volume is set to "0".
 - GENERAL SETTINGS screen > I/O SETTINGS page > SPEAKER is set to "OFF" (see "GENERAL SETTINGS screen" on page 35)
 - The unit is recording or in recording standby
 - The LINE OUT or headphones jack is in use.

Recording is not possible

- Confirm that the microSD card has enough open space.
- Recording becomes impossible when the total number of files reaches 5000.

The input sound is extremely quiet or loud

- Check input level settings. (see "Recording and playing files" on page 33)
- Check the output levels of connected external equipment.

A file cannot be deleted

- A protected (read only) file cannot be erased.

This unit's files do not appear on the computer

- Confirm that the unit is properly connected to the computer using its USB port. The unit might not operate properly if connected through a USB hub.
- Confirm that the unit screen shows "microSD card reader".

The wrong language was set accidentally

- Slide the ϕ /I/HOLD switch toward the ϕ /I icon until the unit turns off. Then, while pressing and holding the HOME [■] button, slide the ϕ /I/HOLD switch toward the ϕ /I icon again.
The language selection menu will appear, and you will be able to select the language.

Noise is occurring

- If this unit is near a TV, radio, power amplifier or other device with a large transformer, noise could occur with this unit or other devices nearby. (see "Precautions for placement and use" on page 24)

The built-in speaker volume is low

- Turn the Ω / \square (headphone/speaker) volume in the direction that increases the number.
- If input levels were low during recording, it might be difficult to hear even when the speaker is at its maximum volume. If the maximum input level during recording is close to 0 dB, the built-in speaker will output at near maximum volume
- If more volume is needed, connect an external speaker with a built-in amp or an amp with a speaker connected to it.

The date/time is incorrect

- They can be set again using the GENERAL SETTINGS screen > SYSTEM page > DATE/TIME item. (see "GENERAL SETTINGS screen" on page 35)

Specifications/rated values

Recorder specifications

Recording media

- microSD card (64 MB – 2 GB)
- microSDHC card (4 GB – 32 GB)
- microSDXC card (48 GB – 512 GB)

Recording/playback formats

- WAV (BWF): 44.1/48/96/192kHz, 16/24-bit or 32-bit float
- MP3: 44.1/48kHz, 128/192/256/320kbps

Number of channels

- Input channels: 6 channels maximum
- Recording tracks: 8 tracks maximum

Analog audio input ratings

Mic inputs (balanced)

Input jacks 3/4/5/6 (input set to “MIC”)

Connectors:

- XLR-3-31 equivalent(1: GND, 2: HOT, 3: COLD)
- 6.3mm (1/4”) standard TRS jacks (Tip: HOT, Ring: COLD, Sleeve: GND)

(phantom power supported by XLR only)

- Input impedance: 2.2 k Ω or higher
- Maximum input level: +2 dBu
- Minimum input level: –75 dBu

Input jacks 3/4/5/6 (input set to “LINE”)

Connectors:

- XLR-3-31 equivalent(1: GND, 2: HOT, 3: COLD)
- 6.3mm (1/4”) standard TRS jacks
- Input impedance: 9 k Ω or higher
- Nominal input level: +4 dBu (GAIN setting at minimum)
- Maximum input level: +24 dBu
- Minimum input level: –53 dBu

Mic inputs (unbalanced): Input jacks 1/2 (support plug-in power)

- Connectors: 3.5mm (1/8”) TRS mini jacks
- Input impedance: 85 k Ω or higher
- Maximum input level: +1 dBV
- Minimum input level: –69.3 dBV

Line input (unbalanced): EXT IN jack

- Connector: 3.5mm (1/8”) stereo mini jack
- Input impedance: 8.5 k Ω or higher
- Nominal input level: –10 dBV (GAIN setting at minimum)
- Maximum input level: +10 dBV
- Minimum input level: –48 dBV

Analog audio output

Line output (unbalanced): LINE OUT jack

- Connector: 3.5mm (1/8”) stereo mini jack
- Output impedance: 200 Ω
- Nominal output level: –14 dBV
- Maximum output level: +6 dBV

Headphone output: headphone jack

- Connector: 3.5mm (1/8”) stereo mini jack
- Maximum output: 45 mW + 45 mW (THD+N 0.1% or less, into 32 Ω load)

Built-in speaker

- 0.4 W (mono)

Control input/output ratings

USB port

- Connector: Type-C
- Format: USB 2.0 HIGH SPEED mass storage class

Bluetooth device connector

- For Bluetooth adapter (AK-BT1) only

Audio performance

Frequency response

- Input jacks 1–6 and EXT IN jack to PCM data
- 20 Hz – 20 kHz at 48 kHz: +0/–0.3 dB (JEITA)
- 20 Hz – 60 kHz at 192 kHz: +0/–2.5 dB (JEITA)

S/N ratio

- Input jacks 1–2 to PCM data (20kHz SPCL LPF, A-weighting)
- 101dB (48 kHz)
- Input jacks 3–6 and EXT IN jack to PCM data (20kHz SPCL LPF, A-weighting)
- 102dB (48 kHz)

Total harmonic distortion ratio (THD+N)

- Input jacks 1–2 to PCM data (1kHz sine wave, –5 dBFS input, GAIN at minimum, 20kHz SPCL LPF)
- 0.005%
- Input jacks 3–6 (LINE IN) to PCM data (1kHz sine wave, –5 dBFS input, GAIN at minimum, 20kHz SPCL LPF)
- 0.008%
- Input jacks 3–6 (MIC IN) to PCM data (1kHz sine wave, –5 dBFS input, GAIN at minimum, 20kHz SPCL LPF)
- 0.006%

Note: JEITA indicates conformance to JEITA CP-2150

Recording times (in hours: minutes)

File format (recording setting)		Card capacity (32GB)
320kbps MP3 (stereo)	44.1kHz	22:13
16-bit WAV (stereo)		50:23
24-bit WAV (stereo)	96kHz	15:25
24-bit WAV (stereo)	192kHz	7:42
32-bit float WAV (stereo)	192kHz	5:47

- The recording times shown above are estimates. They might differ depending on the microSD, microSDHC or microSDXC card in use.
- The recording times shown above are not continuous recording times, but rather they are the total possible recording times for the microSD/microSDHC/microSDXC card.
- If recorded in mono, maximum recording times will be about double those above.
- If using dual recording, maximum recording times will be about half those above.

Other

Power

4 AA batteries (alkaline, NiMH or lithium-ion)
 USB bus power from a computer
 AC adapter (TASCAM PS-P520U, sold separately)

Power consumption

7.5 W (maximum)

Bluetooth

Bluetooth version: v5.0 (Bluetooth Low Energy)
 Transmission distance: About 10 m*
 Frequency range used: 2.4GHz band

*The transmission distance is only an estimate and might vary depending on the surrounding environment and radio wave conditions.

Battery operation time (continuous operation)

- Using alkaline batteries (EVOLTA)

Use conditions	Operation time
Input through input jacks 1/2 (included mics) Phantom power unused STEREO WAV (BWF)/44.1kHz 24-bit recording POWER SAVE MODE on	About 11:00
Input through input jacks 1/2 (included mics) and 5/6 Phantom power used (+48V, 3mA×2 load) STEREO WAV (BWF)/44.1kHz 24-bit recording POWER SAVE MODE on	About 5:30

- Using NiMH batteries (eneloop)

Use conditions	Operation time
Input through input jacks 1/2 (included mics) Phantom power unused STEREO WAV (BWF)/44.1kHz 24-bit recording POWER SAVE MODE on	About 9:30
Input through input jacks 1/2 (included mics) and 5/6 Phantom power used (+48V, 3mA×2 load) STEREO WAV (BWF)/44.1kHz 24-bit recording POWER SAVE MODE on	About 5:30

- Using lithium-ion batteries (Energizer Ultimate Lithium)

Use conditions	Operation time
Input through input jacks 1/2 (included mics) Phantom power unused STEREO WAV (BWF)/44.1kHz 24-bit recording POWER SAVE MODE on	About 18:00
Input through input jacks 1/2 (included mics) and 5/6 Phantom power used (+48V, 3mA×2 load) STEREO WAV (BWF)/44.1kHz 24-bit recording POWER SAVE MODE on	About 10:00

NOTE

When using phantom power, the operation time might be reduced depending on the mic being used.

Dimensions

77 x 40 x 205.6 mm (width × height × depth, excluding protrusions)

Weight

472/381 g (with/without batteries)

Operating temperature range

0–40°C

- Illustrations in this manual might differ in part from the actual product.
- Specifications and external appearance might be changed without notification to improve the product.

WARRANTY / 保証書

< In the United States >

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. This warranty is only valid within the country the unit was originally purchased.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as specified below, this warranty covers all defects in materials and workmanship in this product. The following are not covered by the warranty:

1. **Damage to or deterioration of the external cabinet.**
2. **Damage resulting from accident, misuse, abuse or neglect.**
3. **Damage resulting from failure to perform basic daily maintenance and/or calibration or otherwise resulting from failure to follow instructions contained in your owner's manual.**
4. **Damage occurring during shipment of the product. (Claims must be presented to the carrier)**
5. **Damage resulting from repair or attempted repair by anyone other than TEAC or an authorized TASCAM service station.**
6. **Damage resulting from causes other than product defects, including lack of technical skill, competence, or experience of the user.**
7. **Damage to any unit which has been altered or on which the serial number has been defaced, modified or is missing.**

WHO IS COVERED UNDER THE WARRANTY

This warranty may be enforced only by the original purchaser. This warranty is not valid if the product was purchased through an unauthorized dealer.

LENGTH OF WARRANTY

All parts except heads and disk drives are warranted for one (1) year from the date of original purchase. Heads and disk drives are warranted for ninety (90) days from date of original purchase. Labor is warranted for ninety (90) days from date of original purchase.

WHAT WE WILL PAY FOR

We will pay all labor and material expenses for items covered by the warranty. Payment of shipping charges is discussed in the next section of this warranty.

HOW YOU CAN GET WARRANTY SERVICE

Your unit must be serviced by an authorized TASCAM service station in the United States. (This warranty is not enforceable outside the U.S.) If you are unable to locate an authorized TASCAM service station in your area, please contact us. We either will refer you to an authorized service station or instruct you to return the unit to the factory. Whenever warranty service is required, you must present a copy of the original dated sales receipt from an Authorized TASCAM Dealer.

You must pay any shipping charges if it is necessary to ship the product to service. However, if the necessary repairs are covered by the warranty, we will pay return surface shipping charges to any destination within the United States.

LIMITATION OF IMPLIED WARRANTIES

Any implied warranties, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

TEAC's liability for any defective product is limited to repair or replacement of the product, at TEAC's option. TEAC shall not be liable for:

1. **Damages based upon inconvenience, loss of use of the product, loss of time interrupted operation or commercial loss; or**
2. **Any other damages, whether incidental, consequential or otherwise.**

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

To locate an Authorized Service Center in Your Area

CALL 1-323-726-0303

< Europe >

This product is subject to the legal warranty regulations of the country of purchase. In case of a defect or a problem, please contact the dealer where you bought the product.

Ce produit est sujet aux réglementations concernant la garantie légale dans le pays d'achat. En cas de défaut ou de problème, veuillez contacter le revendeur chez qui vous avez acheté le produit.

Dieses Gerät unterliegt den gesetzlichen Gewährleistungsbestimmungen des Landes, in dem es erworben wurde. Bitte wenden Sie sich im Gewährleistungsfall an den Händler, bei dem Sie das Gerät erworben haben.

Questo apparecchio è conforme alle norme sulla garanzia vigenti nel rispettivo Paese in cui esso è stato acquistato. Si prega di rivolgersi al proprio commerciante, presso il quale è stato acquistato l'apparecchio, nel caso in cui si voglia richiedere una prestazione in garanzia.

Las condiciones de garantía de este aparato están sujetas a las disposiciones legales sobre garantía del país en el que ha sido adquirido. En caso de garantía, debe dirigirse al establecimiento donde adquirió el aparato.

< 日本 >

無料修理規定

1. 取扱説明書、本体貼付ラベルなどの注意書きにしたがった正常な使用状態で保証期間内に故障が発生した場合には、ティアック修理センターが無料修理いたします。
2. 本体の保証期間は、お買い上げの日から1年です。
3. 保証期間内に故障して無料修理を受ける場合は、本書をご提示の上、ティアック修理センターまたはお買い上げの販売店に修理をご依頼ください。商品を送付していただく場合の送付方法については、事前にティアック修理センターにお問い合わせください。
4. ご転居、ご贈答品などでお買い上げの販売店に修理をご依頼にできない場合は、ティアック修理センターにご連絡ください。

5. 次の場合には、保証期間内でも有料修理となります。

- (1) ご使用上の誤りおよび不当な修理や改造による故障および損傷
- (2) お買い上げ後の輸送・移動・落下などによる故障および損傷
- (3) 火災、地震、水害、落雷、その他の天災地変、公害や異常電圧による故障および損傷
- (4) 接続している他の機器に起因する故障および損傷
- (5) 業務上の長時間使用など、特に苛酷な条件下において使用された場合の故障および損傷
- (6) メンテナンス
- (7) 本書の提示がない場合
- (8) 本書にお買い上げ年月日、お客様名、販売店名(印)の記入のない場合、あるいは字句を書き換えられた場合

6. 本書（日本語記載版）は日本国内においてのみ有効です。

These warranty provisions in Japanese are valid only in Japan.

7. 本書は再発行いたしませんので、紛失しないよう大切に保管してください。

※ この保証書は、本書に明示した期間・条件のもとにおいて無料修理をお約束するものです。この保証書によって保証書を発行しているもの（保証責任者）、およびそれ以外の事業者に対するお客様の法律上の権利を制限するものではありません。保証期間経過後の修理などについてご不明の場合は、ティアック修理センターにお問い合わせください。

※ 保証期間経過後の修理、補修用性能部品の保有期間についての詳細は、取扱説明書をご覧ください。

< In other countries/areas >

This warranty gives you specific legal rights, and you may also have other rights that vary by country, state or province.

If you have a warranty claim or request, please contact the dealer where you bought the product.

该保证书赋予了顾客特定的合法权利，并且因国家、州或省等地域的不同，顾客可能拥有其他权利。如需申请或要求保修，请与购买本产品的销售店进行联系。

If you require repair services for your TASCAM equipment, please contact the dealer where the product was purchased from or the TASCAM Distributor in your country. A list of TASCAM Distributors can be found on our website at: <https://teac-global.com/>

WARRANTY / 保証書

Model / Modèle / Modell / Modello
Modelo / Модель / 型名 / 型号

Portacapture X8

Serial No. / No de série / Seriennummer / Numero di serie
Número de serie / Серийный номер / 機番 / 序列号

Date of purchase / Date de l'achat / Datum des Kaufs / Data dell'acquisto
Fecha de compra / Дата покупки / お買い上げ日 / 购买日期

TASCAM

<https://teac-global.com/>

Memo / 修理メモ

Owner's name / Nom du propriétaire / Name des Eigentümers / Nome del proprietario
Nombre del propietario / Имя владельца / お名前 / 顾客姓名

Address / Adresse / Adresse / Indirizzo
Dirección / Адрес / ご住所 / 顾客地址

Dealer's name / Nom du revendeur / Name des Händlers / Nome del commerciante
Nombre del establecimiento / Имя дилера / 販売店 / 销售店名

Dealer's address / Adresse du revendeur / Adresse des Händlers
Indirizzo del committente / Dirección del establecimiento / Адрес дилера / 住所 / 销售店

Sample